

# New Product SVC Guide

## [ SM-G950F ]

**Instructor**

**H/W : Park Joonyung**

**S/W : YeonKyu PARK**

# Notice

This guide is intended solely for the Samsung Electronics internal training and may contain trade secret, industrial technology or privileged and confidential information otherwise protected under applicable law including the Unfair Competition Prevention and Trade Secret Protection Act. Any unauthorized dissemination, distribution, copying or use of the information contained in this guide is strictly prohibited and subject to legal action.

All functionality, features, specifications and other product information provided in this document including, but not limited to, the benefits, design, pricing, components, performance, availability, and capabilities of the product are subject to change without notice or obligation. Samsung reserves the right to make changes to this guide and the product described herein, at anytime, without obligation on Samsung Electronics to provide notification of such change.

# Contents



1. Specification of SM-G950F (Galaxy S8)
2. H/W
  - 2-1. New Concepts of H/W
  - 2-2. Disassembly & Assembly
  - 2-3. New Sensors & Test method
  - 2-4. Parts Diagram (Module & ICs)
  - 2-5. Troubleshooting
  - 2-6. R/F Calibration
3. S/W
  - 3-1. S/W Download
  - 3-2. Key Features
  - 3-3. New S/W features & New Concepts(UI/IX)
4. SVC Technical Information

# Specification

Item	Spec.		
AP Chipset	Vendor	Cores	Speed
	Samsung LSI	Octa-core	big : MNGS Quad 2.5GHz LITTLE : A53 Quad 1.7GHz
Memory	RAM		Flash
	4GB LPDDR4x		64GB
Display	Size	Resolution	Type
	146.5mm (5.8") / 143.3mm(5.6") Full rectangle / rounded corners	Quad HD 1440 x 2960 (S7:1440x2560)	sAMOLED
CAMERA	Resolution (Main/Front)	Auto Focus	Video (Main)
	12MP 2PD OIS / 8M AF	Phase detection	1080p @ 60fps
Network	2G/3G	LTE	
	Support	DL CAT16 (979Mbps) // UL CAT5 (75Mbps)	
Sensors	Accelerometer, Magnetic, Gyro, Barometer, RGB Light, Proximity, Fingerprint, Heart rate		
	New : Force touch		
Connectivity	Bluetooth 5.0, WIFI a/b/g/n/ac, NFC, USB3.1, Display port, MST, WPC		
Battery & GPS	3,000mAh	A-GPS & GLONASS	
Micro SD & OS	Up to 256GB	Android V7.0 (N)	
Remarks	Water Resistance : IP68	Dual SIM : supported (by regions)	

# New Concepts of H/W


## Force touch – How it works

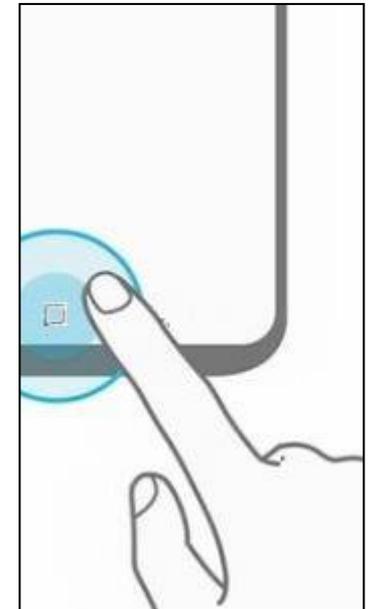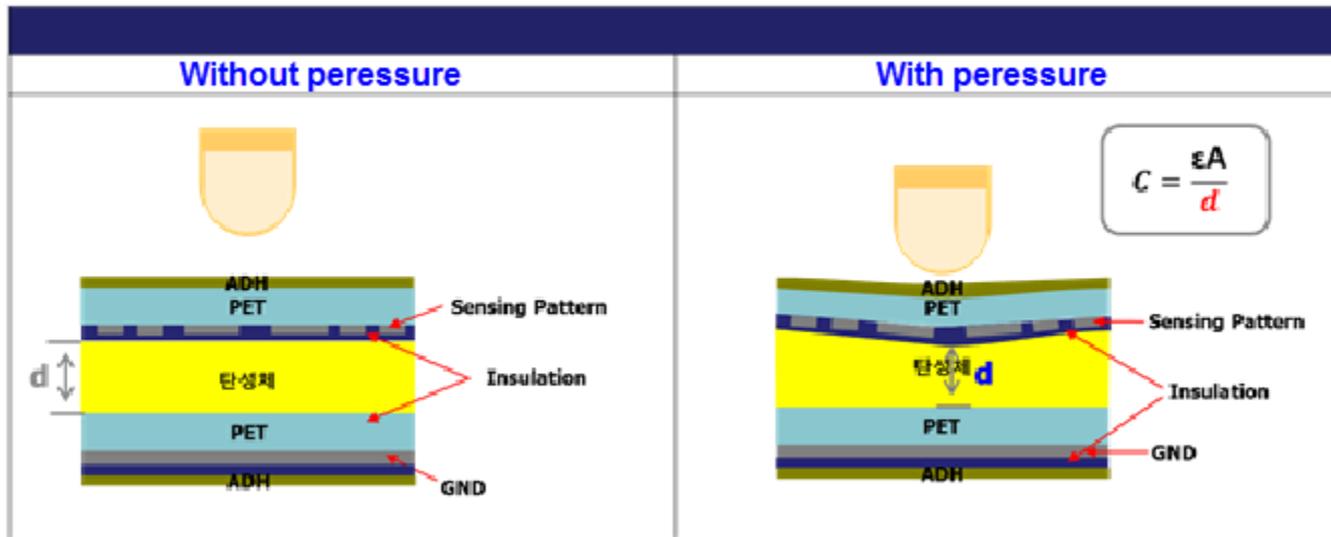

A pair of sensing patterns are added underneath the display module to replace traditional home key which works when soft key UI disappears

# New Concepts of H/W

## DEX – turning a phone into a PC

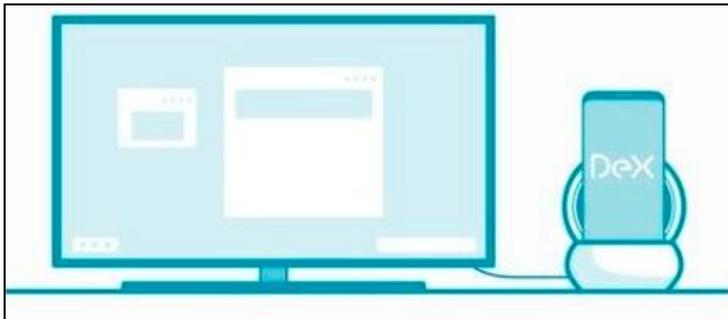

1. **Multi-Tasking**
2. **External Monitor**
3. **Keyboard & mouse**

**Enables to have personal computing environment without carrying laptops**


**Powerful performances with familiar window shape UI multi-tasking**

**A Travel adaptor should be presented to provide DEX with power**

# New Concepts of H/W

## Display port

Using USB Type-C alternate mode, Galaxy S8 can send video stream and audio stream directly to external monitors while receiving charging power at the same time

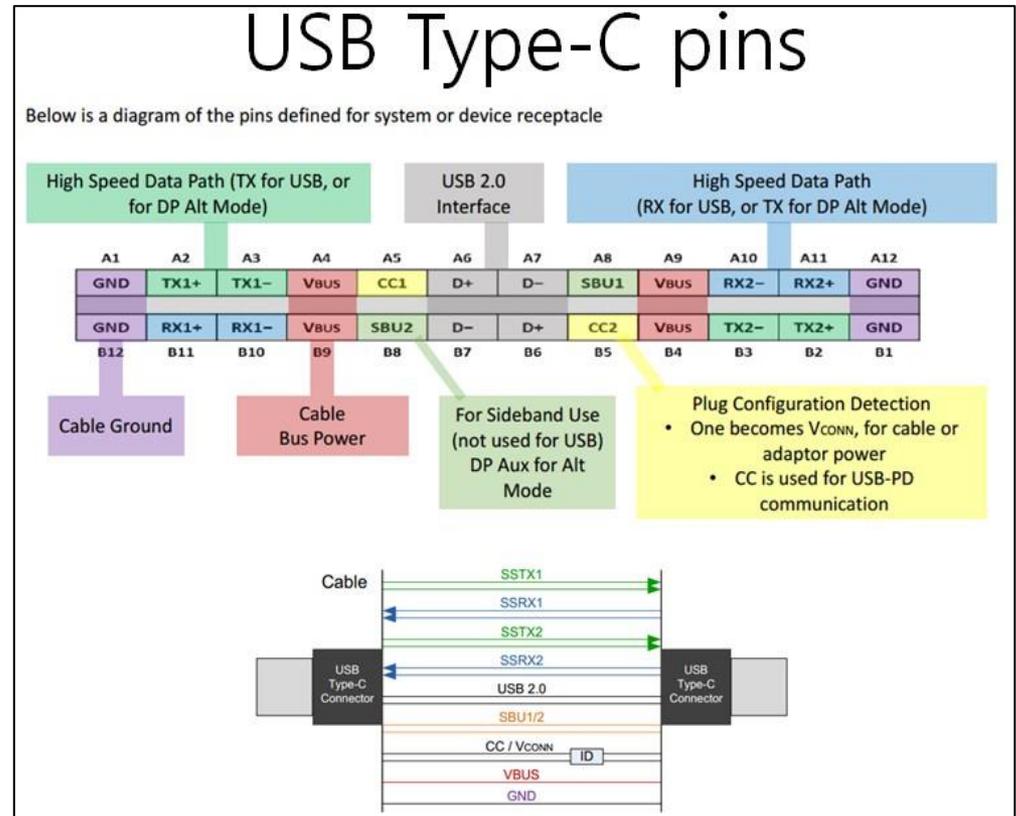

# Disassembly & Reassembly




# Disassembly & Reassembly

## Important management points

Sensor FPCB connector




OK

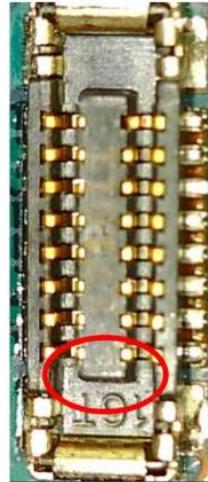

NG

A misalign of the connectors can cause a high sleep current problem

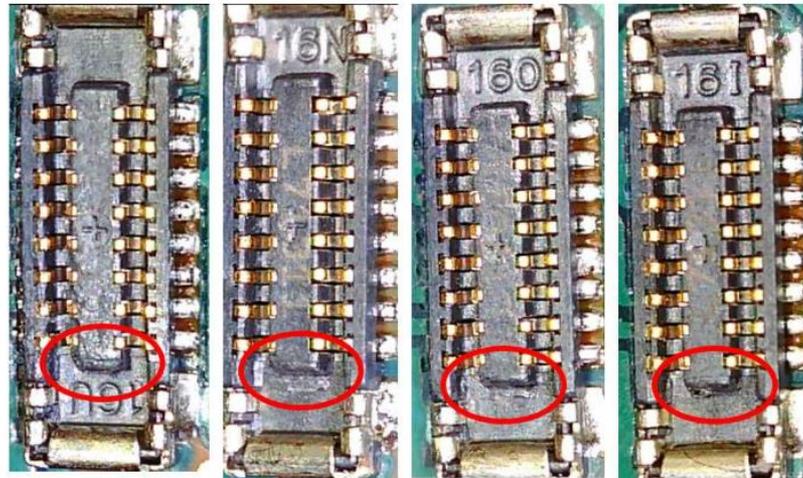


# Disassembly & Reassembly

## Important management points

OK

Push softly to make a round curve

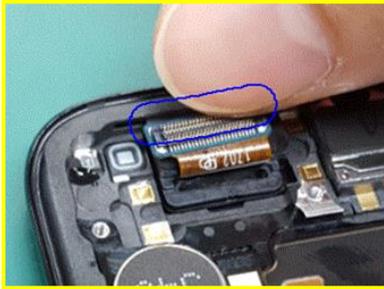


NG

Giving too much pressure could cause FPCB cracks



Blue cable


White cable

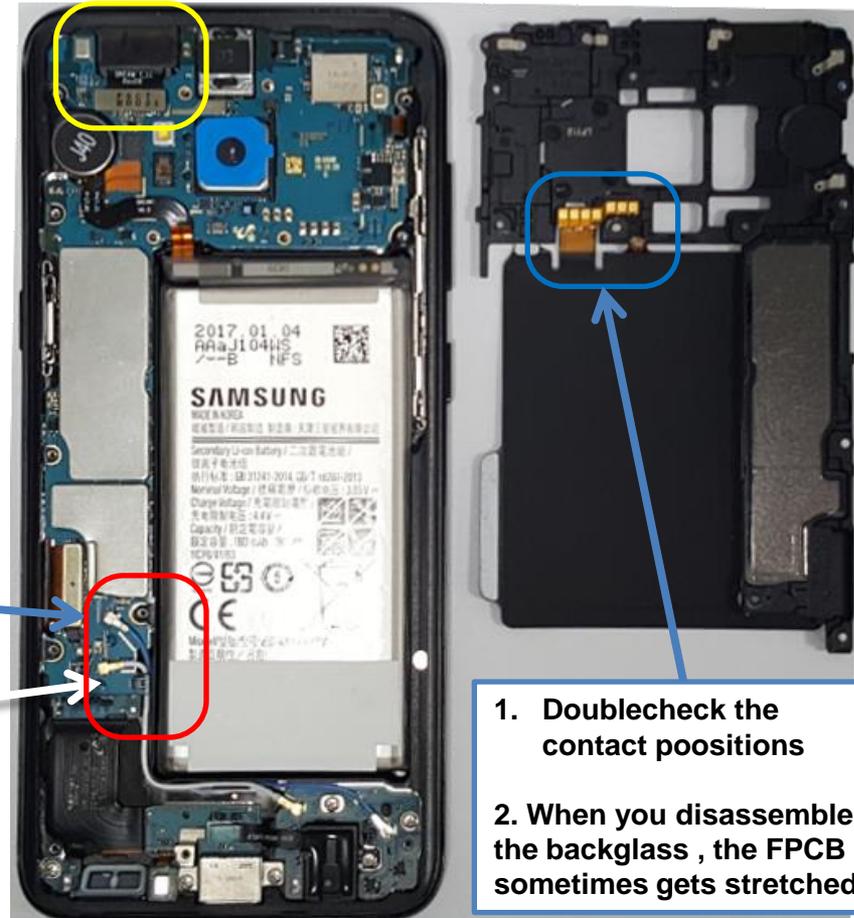

1. Doublecheck the contact positions
2. When you disassemble the backglass, the FPCB sometimes gets stretched


# Parts Layout

## Rear assembly

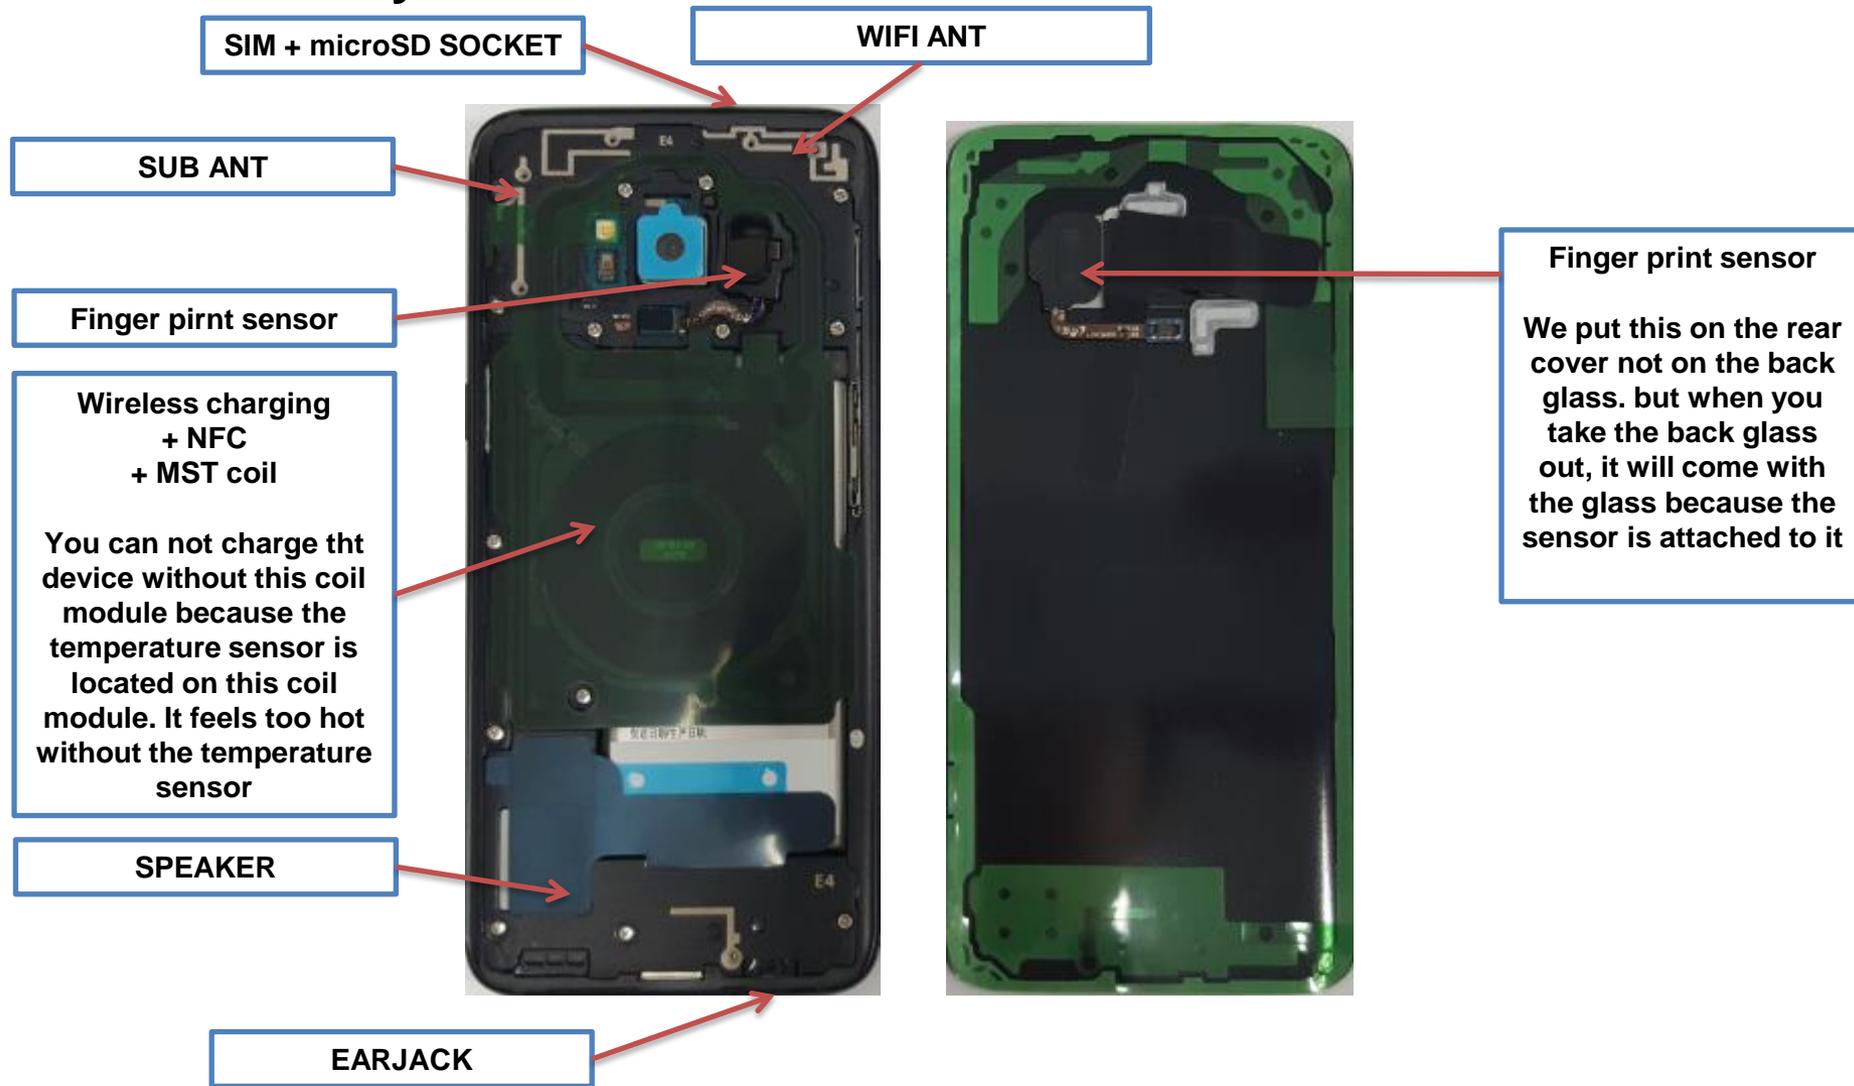

# Parts Layout

## Front assembly

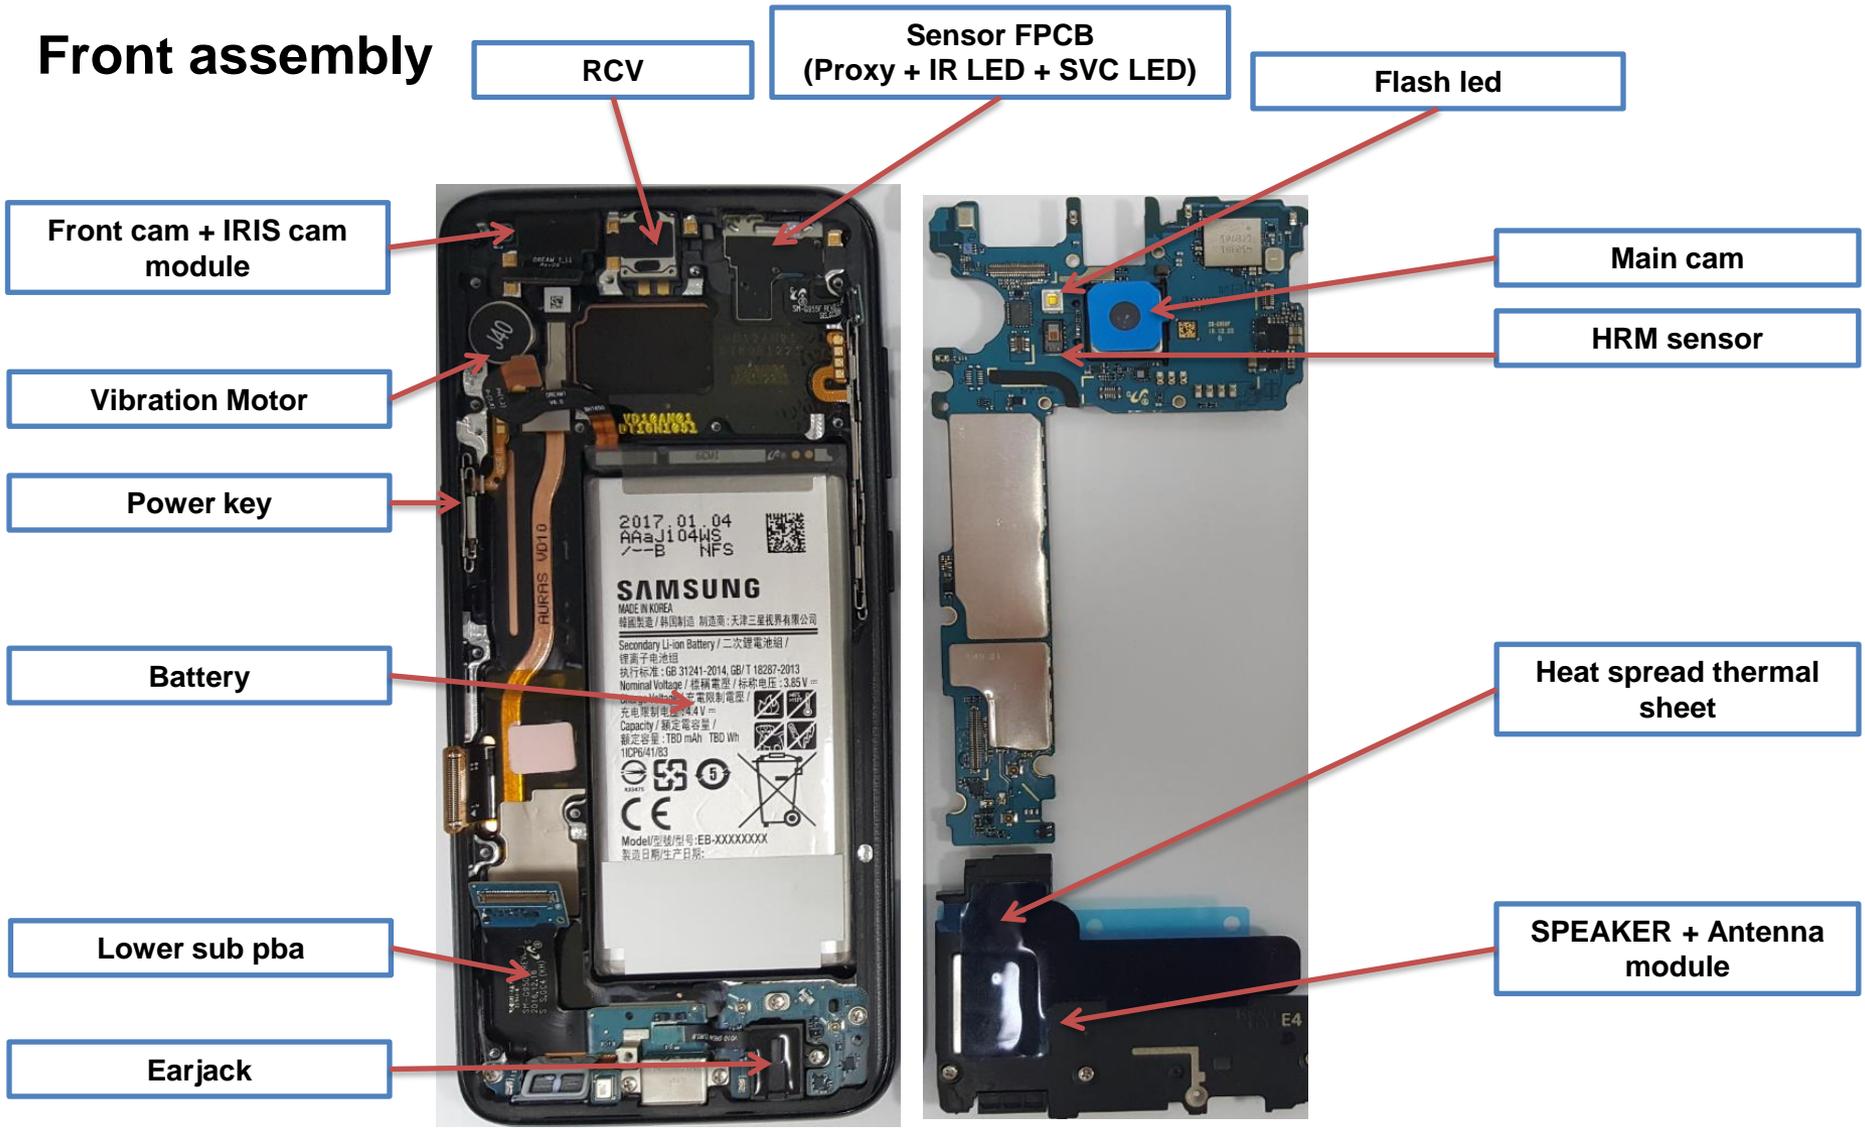

# Parts Layout

## Rear assembly

SIM + microSD SOCKET

WIFI ANT

SUB ANT

Finger pirnt sensor

Wireless charging  
+ NFC  
+ MST coil

You can not charge tht  
device without this coil  
module

SPEAKER

EARJACK

Finger print sensor


We put this on the rear  
cover not on the back  
glass. but when you  
take the back glass  
out, it will come with  
the glass because the  
sensor is attached to it



# Parts Layout

## PBA (Top side)

<b>SIM100</b> SIM1,SIM2,T-flash Socket
<b>U203</b> Antenna switch
<b>ANT802, ANT803</b> RCV contact clips
<b>ANT303, 304, 305, 306</b> SIDE KEY contacts
<b>U408</b> GND contact clip
<b>U418</b> NFC IC
<b>U408</b> 6-Axis sensor
<b>U402</b> Sensor hub IC
<b>UME300</b> UFS MEMORY
<b>U100</b> ET MODULATOR
<b>PAM102</b> MB LPAMID
<b>PAM101</b> 2G PAM
<b>U800</b> SPK AMP
<b>U805</b> OVP IC

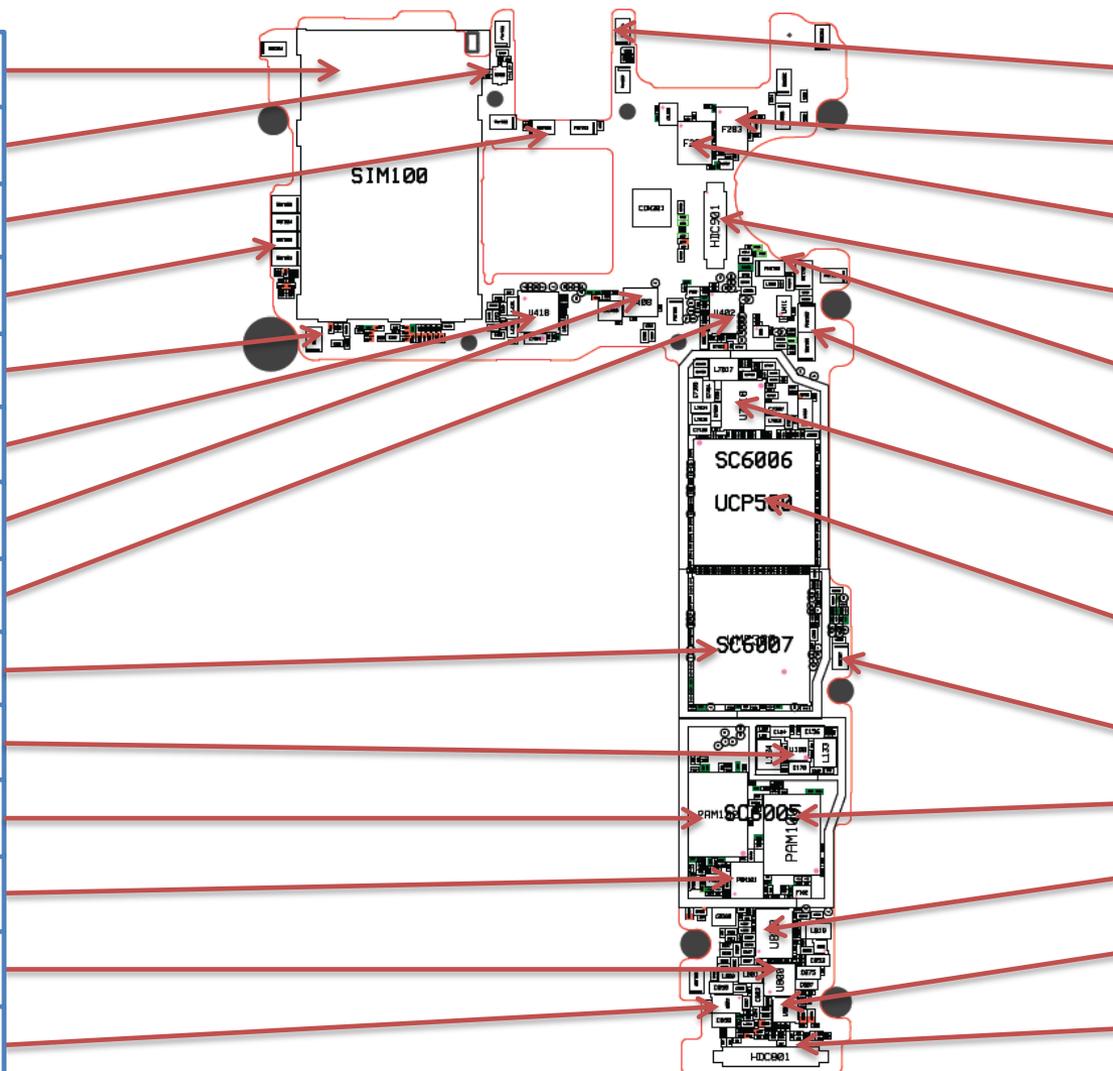


<b>U201</b> Antenna contact
<b>F203</b> MB LFEM
<b>F201</b> LB LFEM
<b>HDC901</b> Rear Camera Connector
<b>ANT700, 701</b> MOTOR contact clips
<b>ANT301, 302</b> Powerkey contact clip
<b>U7018</b> IF PMIC
<b>UCP500</b> AP UCP500-UP MEMORY
<b>ANT207</b> GND contact clip
<b>PAM100</b> LB LPAMID
<b>U808</b> CODEC IC
<b>U804</b> CC IC
<b>HDC801</b> SUB FPCB IF Connector

# Parts Layout

## PBA (Bottom side)


MIC800 SUB MICROPHONE
HDC900 FRONT CAM / IRIS CAM conn.
LED900 FLASH LED
F206 MB LFEM
U412 HRM Sensor
HDC7000 Battery connector
HDC5000 JTAG connector
U903 COMPANION IC
U901 SUB PMIC
U7002 AP PMIC
TCX300 TCXO
HDC902 DISPLAY Connector
U103 MAIN SWITCH (BAND7/38/40/B1 PRX)
RFS100 Antenna switch contact

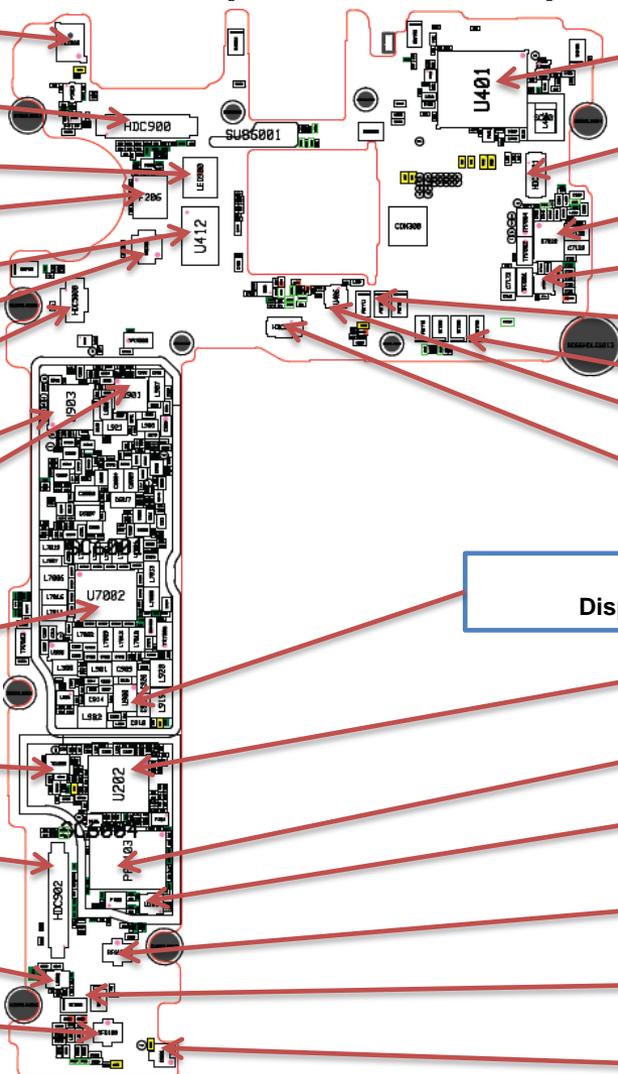

U401 BT / WIFI IC
ANT1101/1102 Ant. Contact (for Sub Ant.1)
U7020 MFC IC
U7023 MST Switch IC
ANT711/707 NFC clips
ANT709/705/708/706 WPC, MST clips
U406 Barometer
HDC904 Fingerprint sensor conn.
U202 TRANSCIVER
PAM103 HB LPAMID
U101 Antenna switch
RFS101 Antenna switch contact
F101 MAIN FEMID (BAND1TX/2/3/5/8/20)
Q801 VBUS discharging FET

# Parts Layout

## SUB PBA

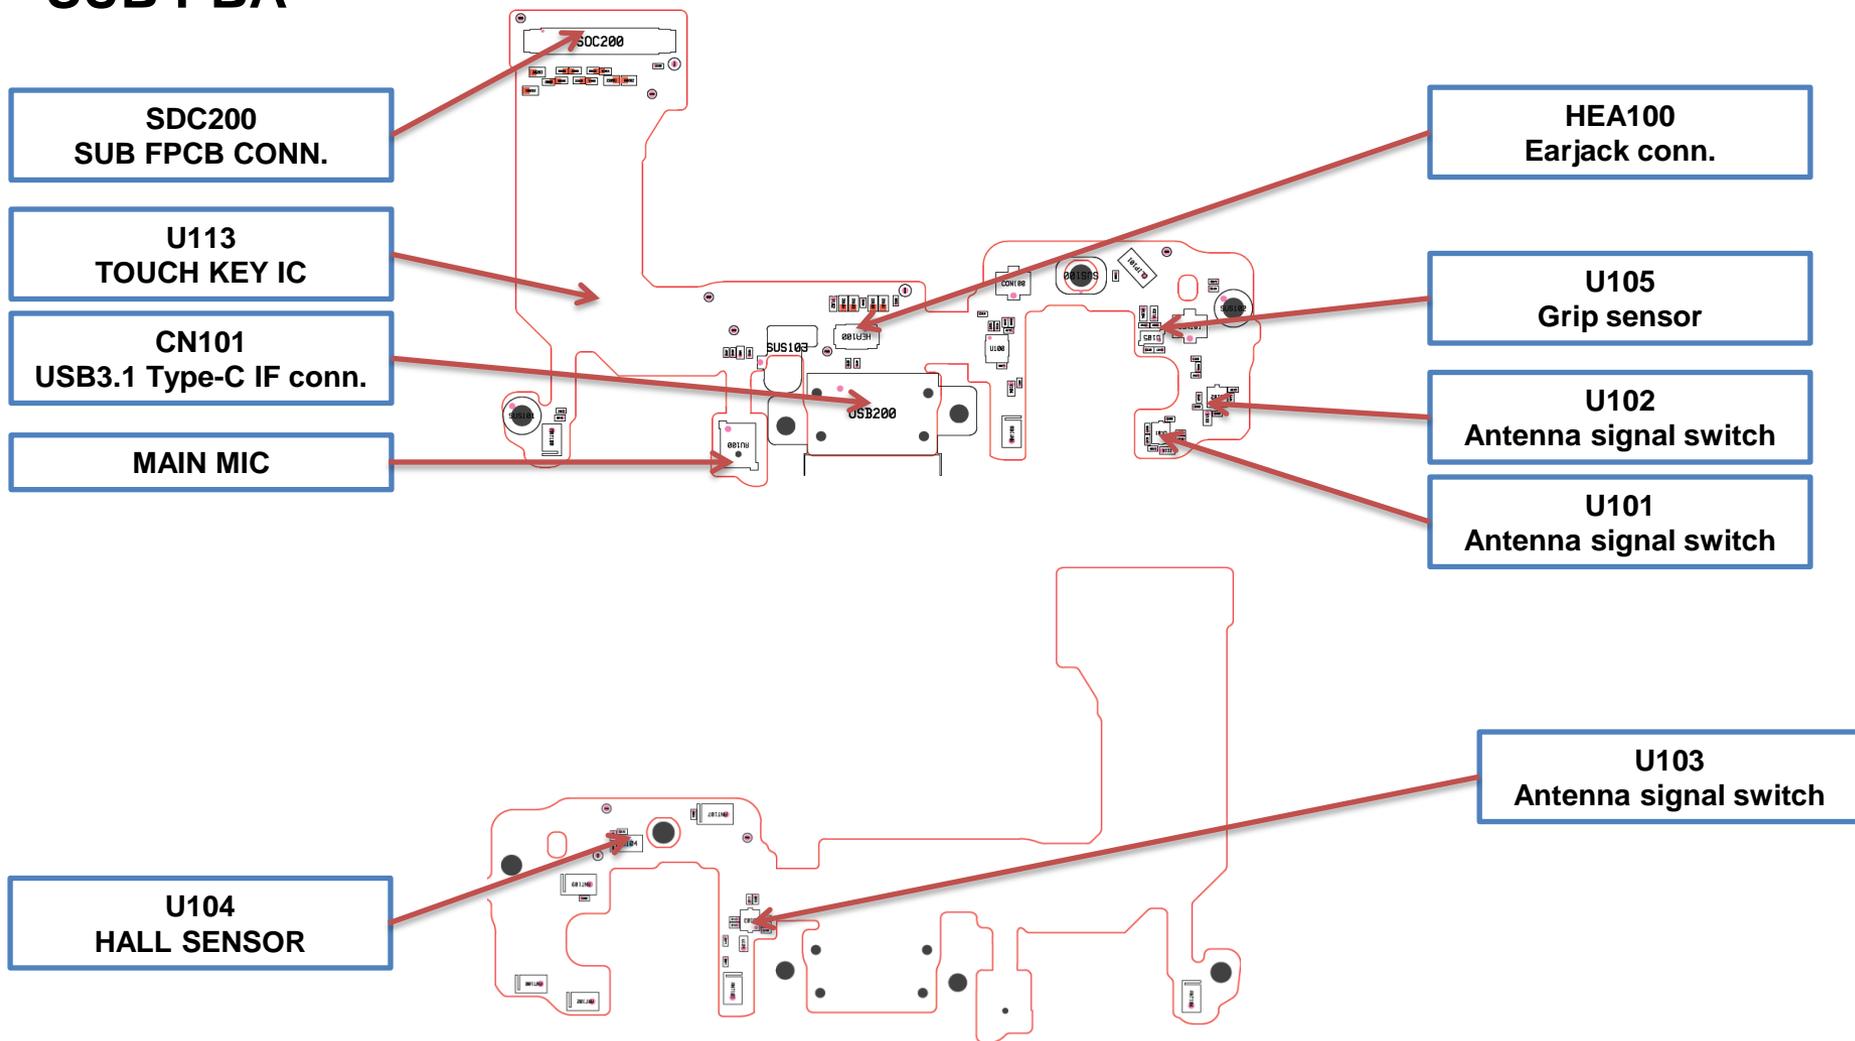

# Troubleshooting

The connection diagram of the Power & Current test jig has been changed by applying USB type-C. Please refer to the another document. (New connectivity - USB Type C\_Rev1.0)



USB TYPE C


## No Power

Step	Check point	Result value	Defect point
1	Confirm the defect symptom	-	-
2	** Analyse reasons of No-Power using the <b>Power &amp; Current test jig Power test mode.</b>	PASS	Battery, Battery terminal, Physical Key
		Leakage Current fail	Go to the step 2.1
		Power On Current fail	Go to the step 3
2.1	Check the Resistance between JIG Power V_Battery / VPH_PWR/ V_BAT and Ground. (V_Battery = C7200 , V_BAT = C858)	Normal (Over dozens of KΩ)	Go to the step 5
		Abnormal	Capacitors for ESD protection
3	Is it possible to enter the download mode?	Yes	Go to the step 3.1
		No	Go to the step4
3.1	Check if it's rooted.	Rooted	SW
		Normal	S/W update
4	Try to do the boot recovery.	Pass	Go to the step 3
		Fail	Go to the step 5
5	Check the voltage of C860	C860 = Power supply voltage	Go to the step 6
		If not the correct value	Replace the U7002(=PMIC)
6	Check the frequency of TCX300	26MHz	Main chip (UCP500)
		If not the correct value	TCXO

\*\* Usage guide of the Power & Current test jig has been uploaded at GSPN. (Power & Current Tester Guide\_Re5.1)

# Troubleshooting

## No Power (cont')

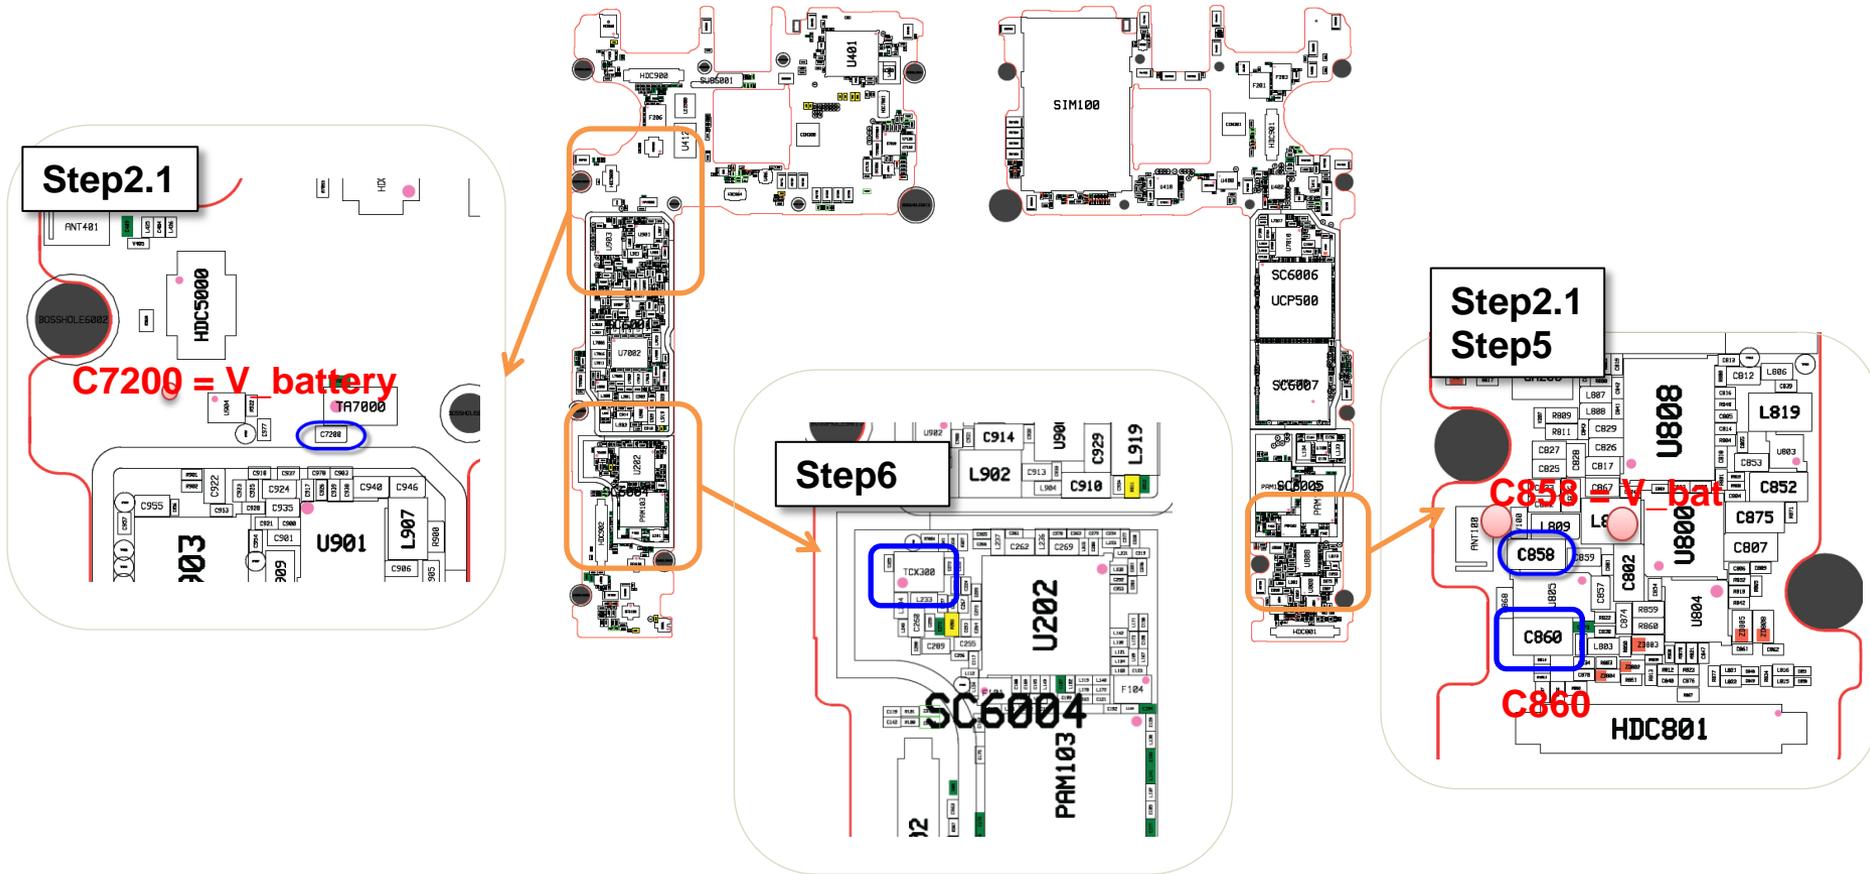

# Troubleshooting

The connection diagram of the Power & Current test jig has been changed by applying USB type-C. Please refer to the another document. (New connectivity - USB Type C\_Rev1.0)



USB TYPE C

## Power on but no operation

Step	Check point	Result value	Defect point
1	Confirm the defect symptom	-	-
2	** Analyse reasons of No-Power using the <b>Power &amp; Current test jig</b> .	PASS	Go to the step 1
		Leakage Current fail	Refer to the No-power Troubleshooting
		Power On Current fail	Go to the step 2.1
2.1	Try to do the boot recovery.	Solved	Boot area in S/W
		Not solved	Go to the step 7
3	It's possible to enter the download mode?	Yes	Go to the step 3.1
		No	Go to the step 4
3.1	Check if it's rooted.	Rooted	OOW
		Normal	Go to the step 4
4	Enter the safe mode, and check if powers up.	Solved	3 <sup>rd</sup> party Apps.
		Not solved	Go to the step 5
5	Perform full reset.	Solved	S/W or 3 <sup>rd</sup> party Apps
		Not solved	Go to the step 6
6	Upgrade software to the latest version.	Solved	S/W
		Not solved	Go to the step 7
7	Check the voltage of C312, C308	C312 ≠ 1.8V C308 ≠ 2.95V	PBA
		If not the correct value	Replace the UFS memory


\*\* Usage guide of the Power & Current test jig has been uploaded at GSPN. (Power & Current Tester\_Rev5\_150716.pdf)

- This document cannot be used without Samsung's Authorization -

Confidential

# Troubleshooting

## Power on but no operation (cont')

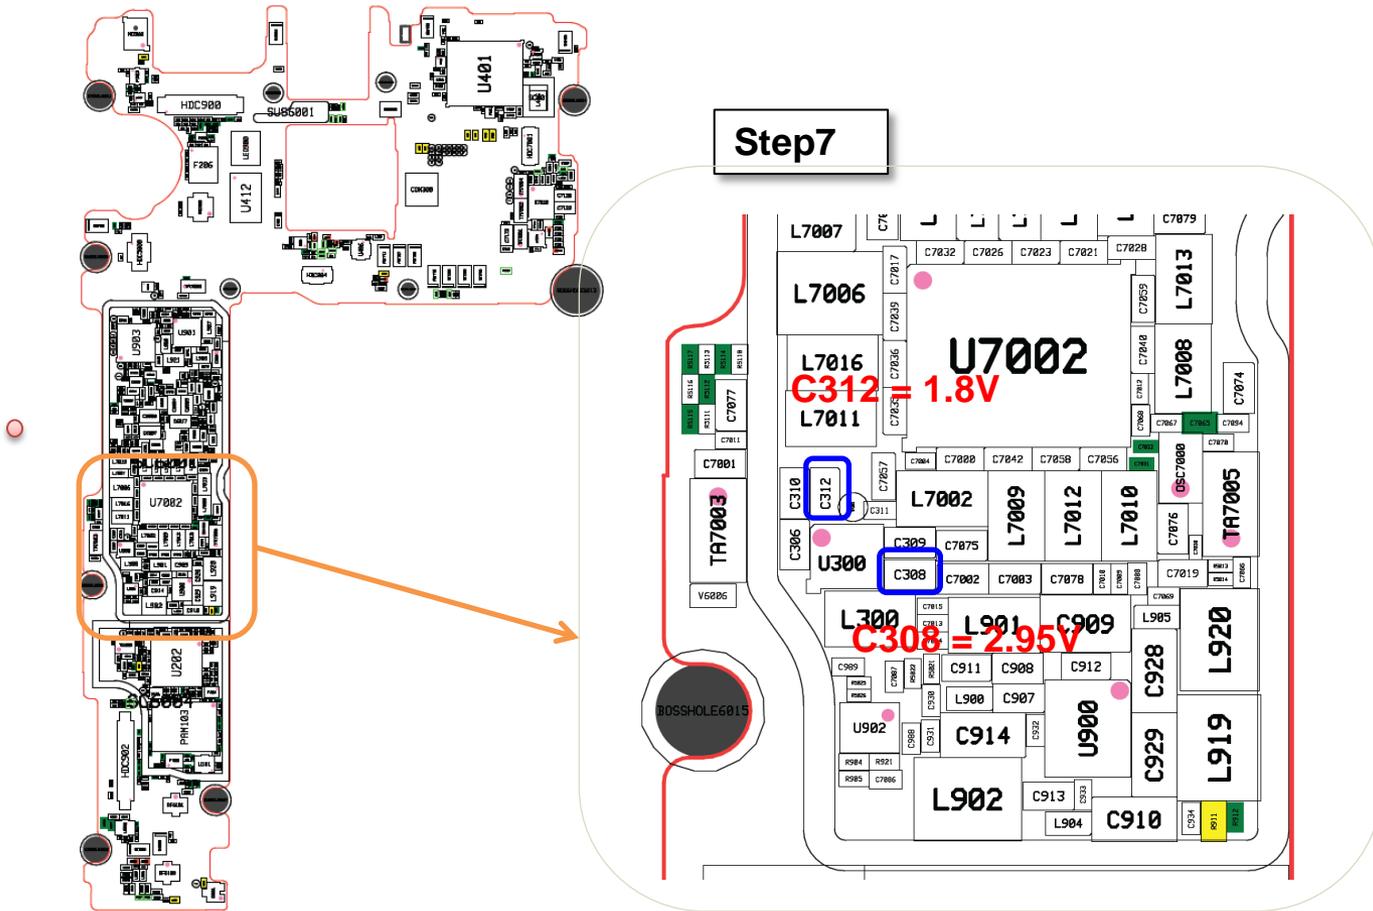

# Troubleshooting

## No Charging

Step	Check point	Result value	Defect point
1	Confirm the defect symptom	-	-
2	Charge the customer battery during 5min at least.	Solved	Totally discharged battery
		Not solved	Battery
3	Try to charge the phone using the normal charger of repair center.	PASS	Customer's Charger
		FAIL	Go to the step 4
4	<b>**Check the charging current using the galaxy must – charging current test mode.</b>	PASS	Go to the step 5
		FAIL	Go to the step 6
5	Disassemble and check I/F connector visually	Dust	Clean I/F connector
		Damage	Replace I/F connector
		Normal	Go to the step 6
6	Check the voltage of C854	C854 = 3.4V ↑	Go to the step 7
		If not the correct value	Replace U804
7	Check the voltage of L809	L809 = 5V	Replace the U7018
		If not the correct value	Replace the U805

**\*\* User guide of the GALAXY MUST has been uploaded at GSPN.**



# Troubleshooting

## Call Problem (without RF equipment)

Step	Check point	Result value	Defect point
1	Confirm the defect symptom	-	-
2	Check the settings (airplane mode, Mobile networks)	Abnormal	Settings
		Normal	Go to the next step
3	Check the debug screen *#0011# (Compare to normal device)	Abnormal	Go to the next step
		Normal	Network
4	Check the RF parts except PBA. (Coaxial cable, Antenna, Shielding condition, etc..)	Broken, dust, corrosion	RF parts
		Loose fitting	Connection
		Normal	Go to the next step
5	Check the status visually(crack, missing, Corrosion..etc) of RF components. (compare to normal PBA)	Abnormal	RF components.
		Normal	AP+CP(Call Processor) (UCP500)
5	PAM100 LB LPAMID PAM102 MB LPAMID PAM103 HB LPAMID U101 LB/MB/HB SWITCH F201 LB LFEM (B5/812/13/17/18/19/202628) F203 MB LFEM (B1/4/9, B3/7/40 4RXD) F206 HB LFEM (B2/3/7/25/38/40/41, B1/4 4RXD)		



# Troubleshooting

## Sound Problem

Step.	Check point	Result value	Defect point
1	Confirm the defect symptom.	-	-
2	*#0*# → speaker	No sound	Go to the next step
		Normal	S/W or Settings
3	Replace the speaker modue	Solved	speaker
		Not solved	Go to the next step
4	Activate the speaker path. (*#0*# → Speaker)	-	-
5	Check the signal at two of speaker contacts. (Using oscilloscope) Notice : It should be measured when the speaker path is activated on.	Same signal compared with a good PBA	Go to step 6
		No signal	Go to step 7
6	Check if the SPK is contacted to SUB PBA well, and assemble the phone again.	Solved	Assembly error
		Not solved	Go to step 3
7	Check the signal at L800, L802	L800, L802 = no signal	PBA
		L802, signal found	Go to step 6

# Troubleshooting

## Sound Problem

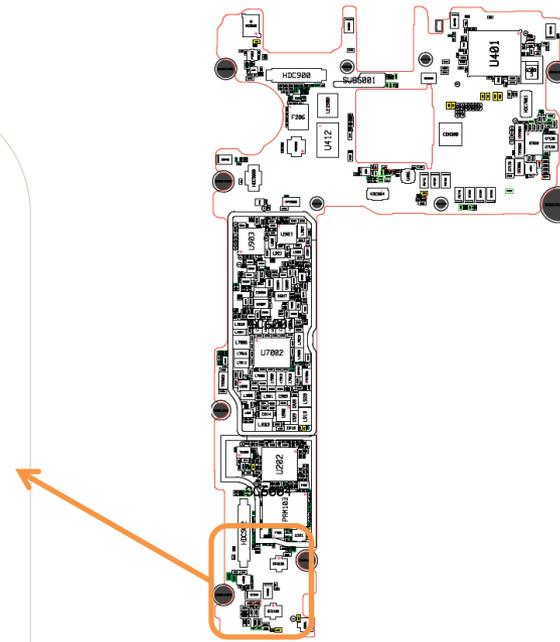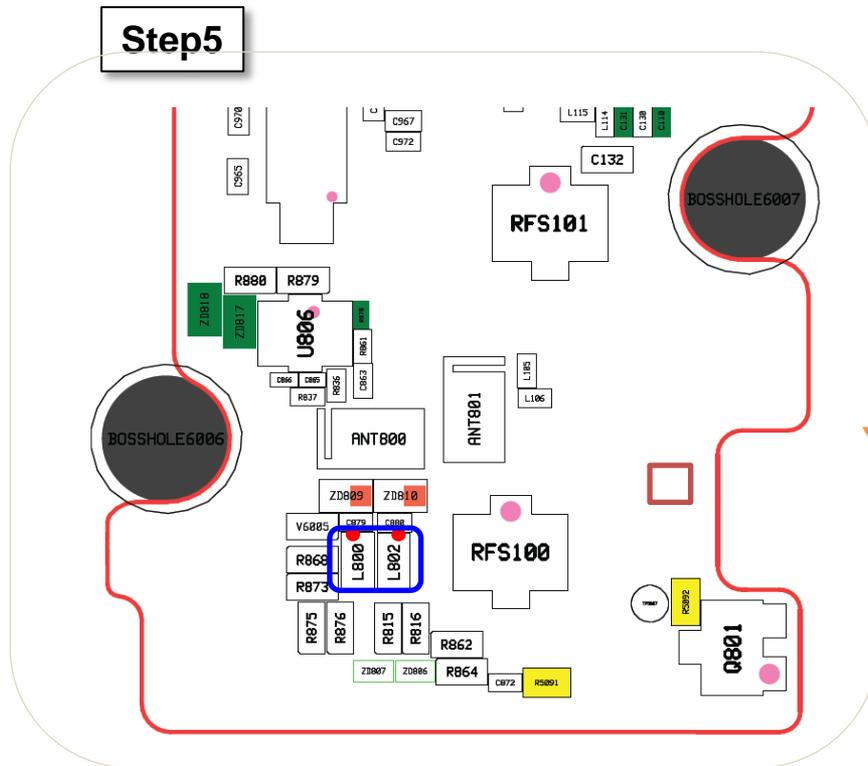


# Troubleshooting

## Display Problem

Step	Check point	Result value	Defect point
1	Confirm the defect symptom	-	-
2	Check the display connector (HDC902)	Broken, dust, corrosion	connector (HDC902)
		Loose fitting	Connection
		Normal	Go to the next step
3	Replace the display module	Solved	Display module
		Not solved	Go to the next step
4	Connect display and turn the phone on with a power supply (power supply voltage : 4.2V)	-	-
5	Check the voltage of C931 = 3.0V, L900 = 7.0V C932 = 1.8V Be noted. It should be measured when the display is activated on	If not the correct value	Display PMIC(U900)
		C931=3.0V L900 = 7.0V C932 = 1.8V	AP or PBA

# Troubleshooting



## Display problem

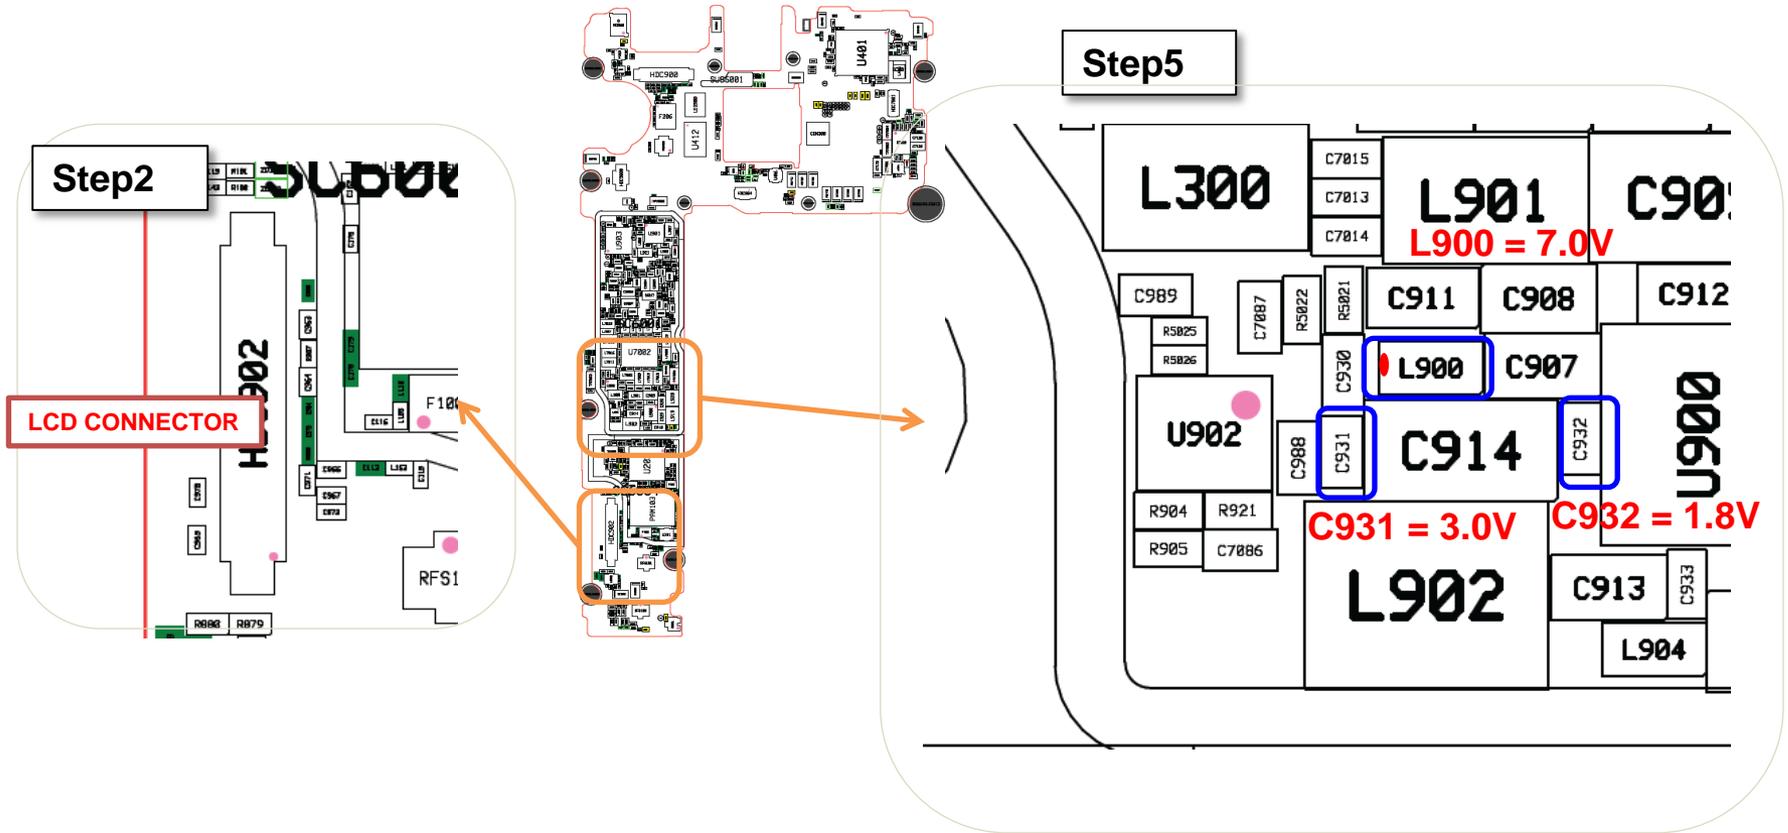

# RF Calibration Preparation

Item	Quantity	Code
① 4 Port Divider	1	GH81-11962A
② 50 ohm Termination	2	GH81-11962E
③ RF cable (Divider to phone)	2 of each	GH81-11962M GH81-11962U
④ RF cable (Instrument to divider)	1	GH81-11962B
⑤ Anyway JIG S103	1	-
⑥ Power Supply	1	E3632A
⑦ RF Equipment	1	CMW500
⑧ IF cable	1	GH81-11962W

Connection Diagram

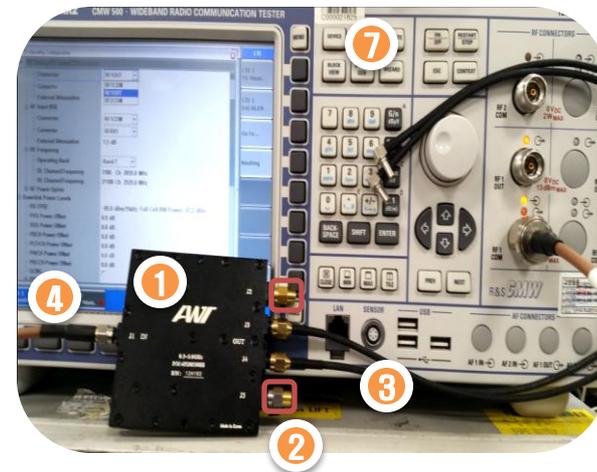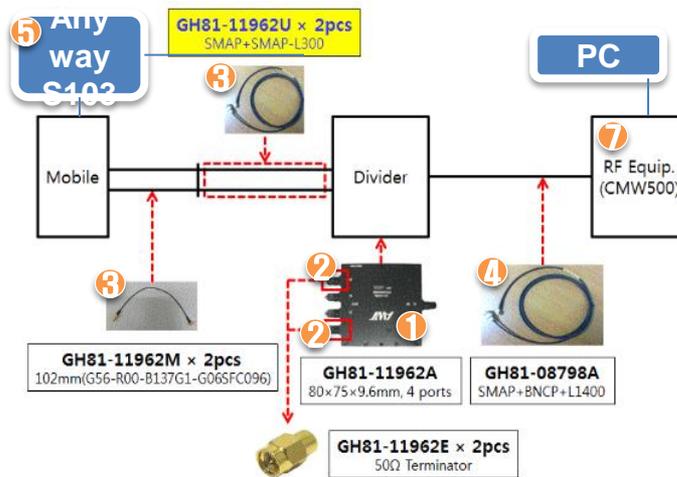

# S/W Download

※ S/W Update via Fenrir is mandatory. Below is the way to use Odin for any specific case.

## How to enter the S/W download mode


1. Turn off the device
2. Press 3 keys simultaneously which are Volume Down key, Bixby key and Power key
3. As following the instruction, press Volume Up key after Warning message
4. Connect USB cable (C-Type) after Downloading message.



※ For force to reset the device, press Volume Down + Power key during 7 sec.

## How to download S/W


1. Run Odin3 v3.12 and later
2. Check the device is connected to Odin
3. Select 4 binaries which are BL, AP, CP, CSC
4. Press the start button in the Odin
5. Automatically reboot the device when downloading is completed

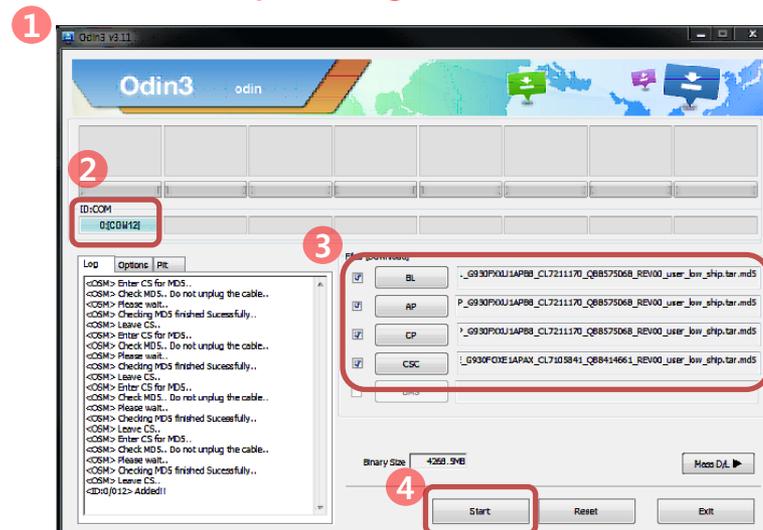

# Key Features for G950F/G955F

## Bixby Service

- To go to Hello Bixby, press 1) Bixby key or 2) swipe right on Home screen
- Bixby Home, Bixby Vision, Bixby Voice, Bixby Reminder

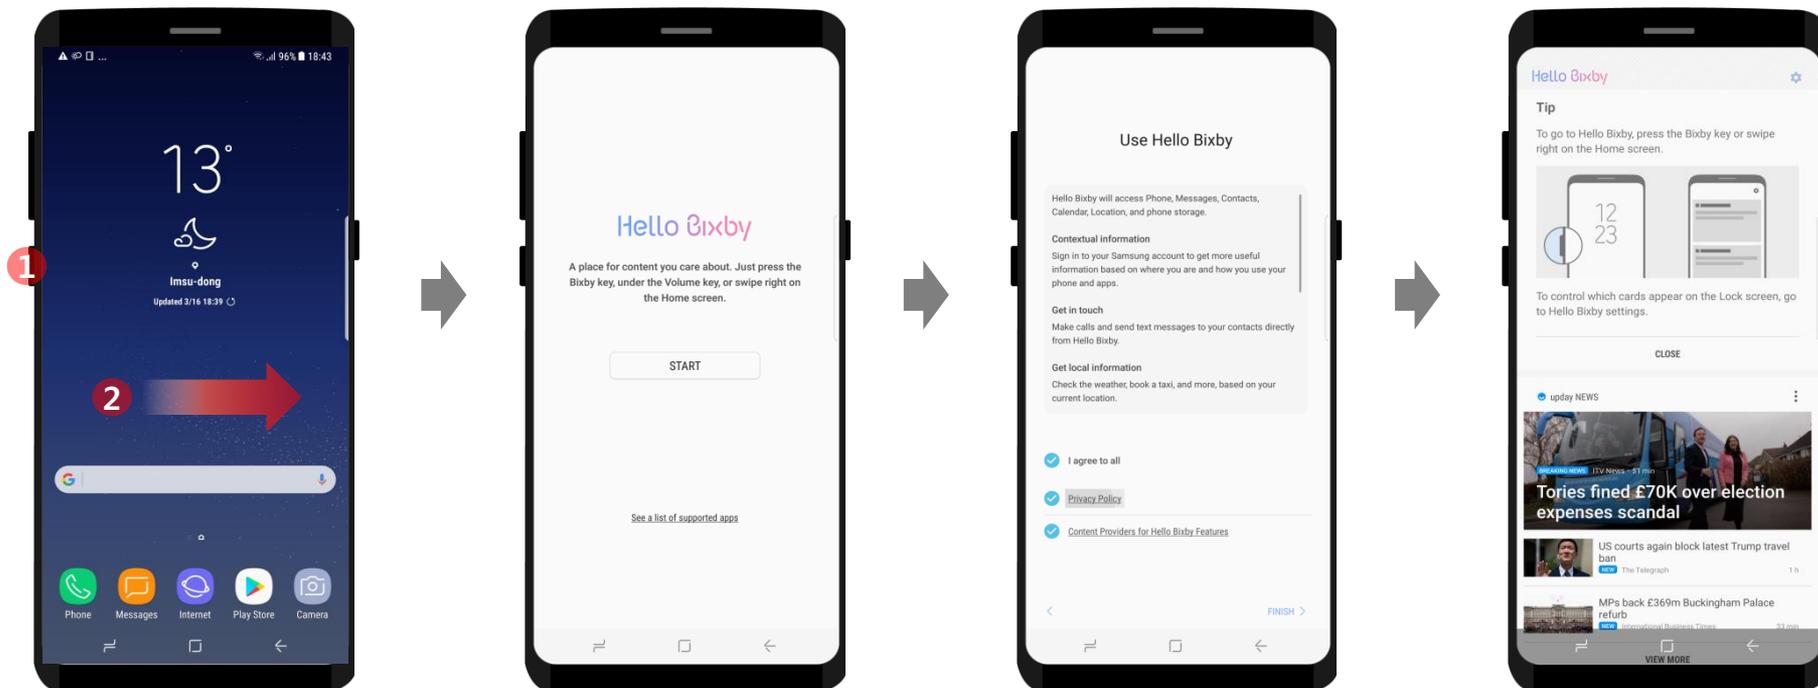

# Key Features for G950F/G955F


## Bixby Key Mapping *Is located under Volume Key on the left side*

Gesture	Screen	Bixby Voice Service Enabled
Short Press	On Any Screen (including *Incoming call)	Bixby Home (Hello Bixby)
	On Lock screen	Bixby Home (Hello Bixby)
Press and Hold	On Any Screen (including *Incoming call )	Bixby Voice
	On Lock screen	Bixby Voice
	On Keyboard	Dictation


# Key Features for G950F/G955F

## Bixby Home (Hello Bixby)


- Bixby Home is a new name for DayLite and Hello Bixby is greeting

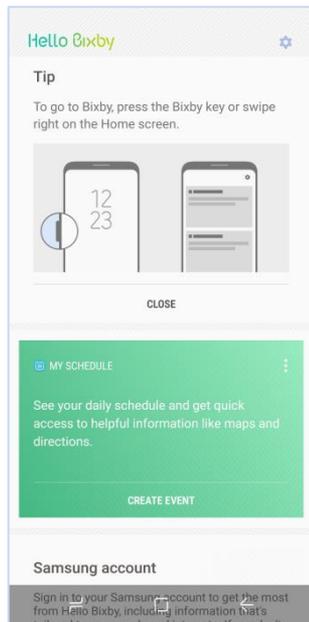


Bixby Home

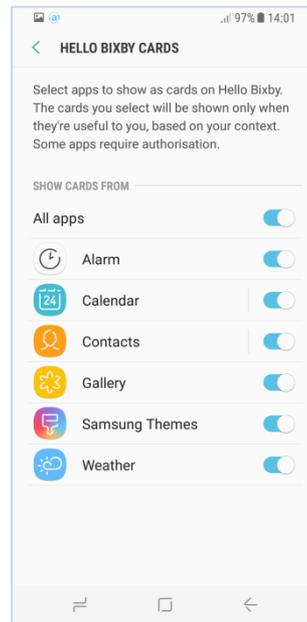

Bixby Cards

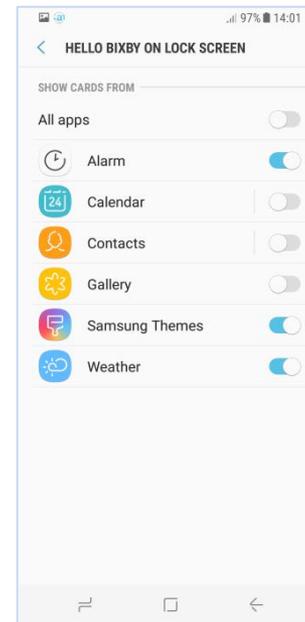

Bixby on Lock Screen

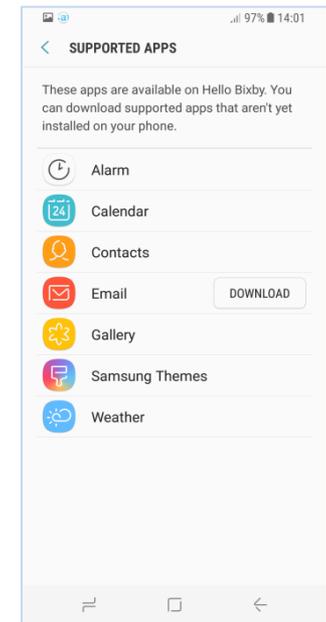


Supported App


# Key Features for G950F/G955F

## Bixby Voice


- Bixby Voice is the way to give a commend and provide feedback about the result by thumb up/down when the commend is completed

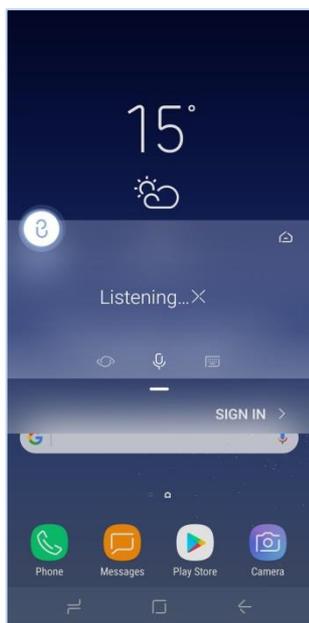


Bixby key Long press

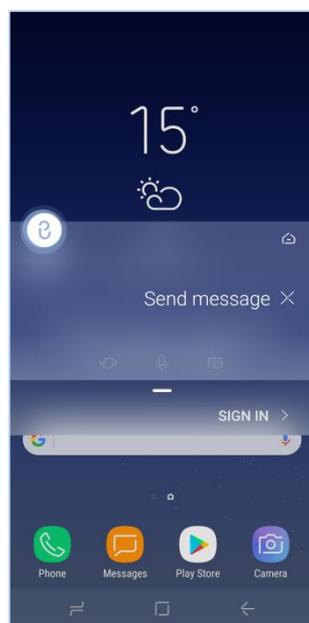

Commend

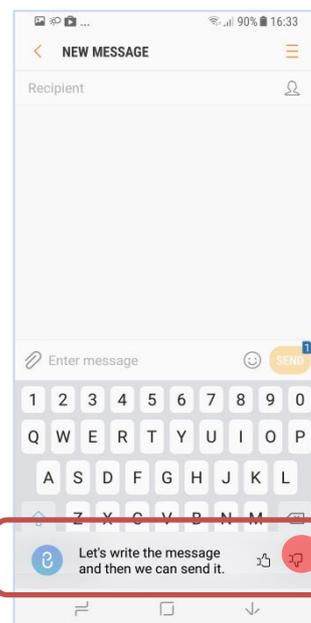

Result & Feedback

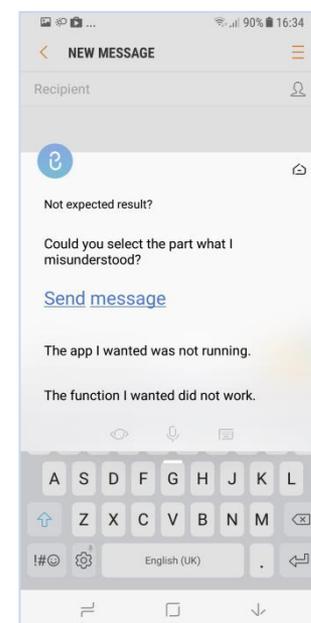

Training

# Key Features for G950F/G955F

## Bixby Vision

- The most intuitive way to connect Real world to Digital world



Shopping



Place  
(Landmark,  
Restaurant)



Image  
Search



Wine



Text  
(Translation,  
OCR, BizCard)



QR &  
Barcode

The Quickest Search using Camera

- Multi Entry to Bixby Vision

① Camera



② Gallery



③ Samsung Internet



④ Bixby Home (TBD)




# Key Features for G950F/G955F

## Bixby Reminder


*"A Service that Stores Tasks or Contents and Alerts Users based on their Situation"*

- Reminder by Bixby Home and Voice

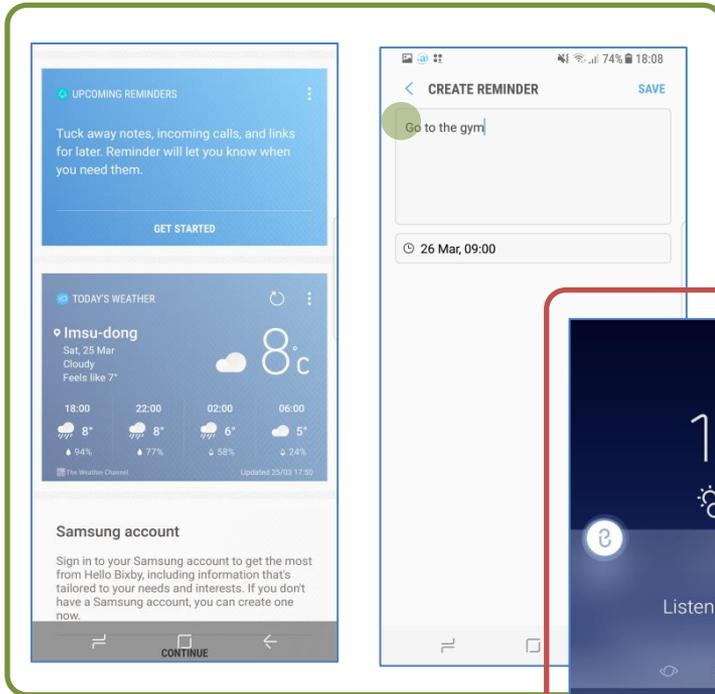


### By Bixby Voice

"Remind me to eat drug at 3pm"  
"Remind me to buy milk when I leave my office"  
"Remind me to water my plants when I get home"

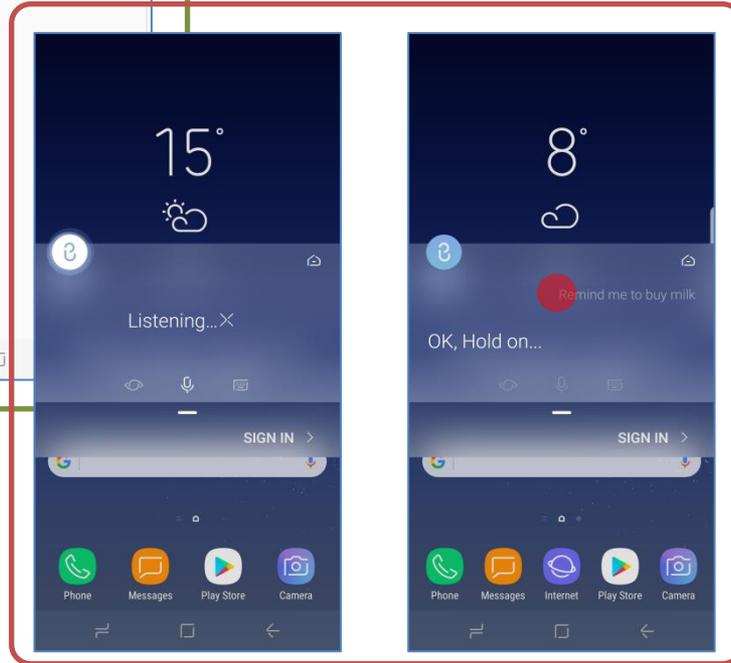

### Reminder

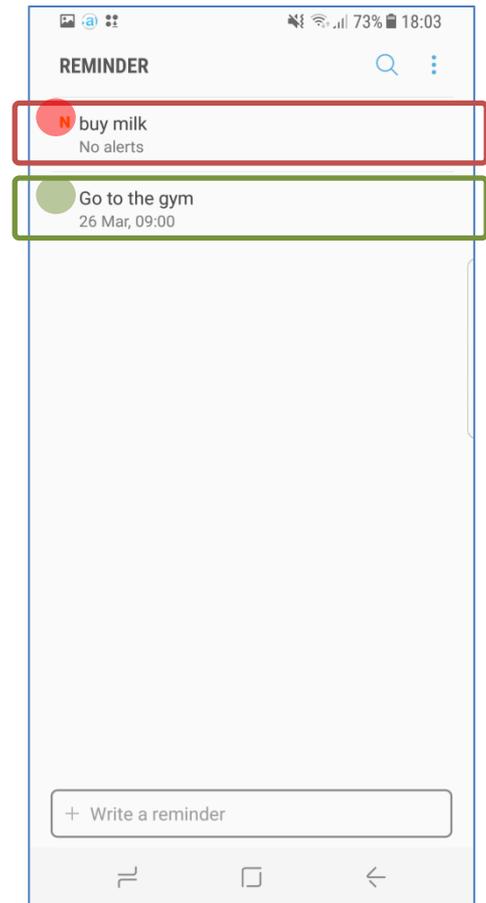


### By Bixby Home

Reminder App launched by Hello Bixby Card

# Key Features for G950F/G955F


## Samsung Dex

- is a service that provides users with a desktop environment by connecting their smartphone to an external display (TV or monitor).

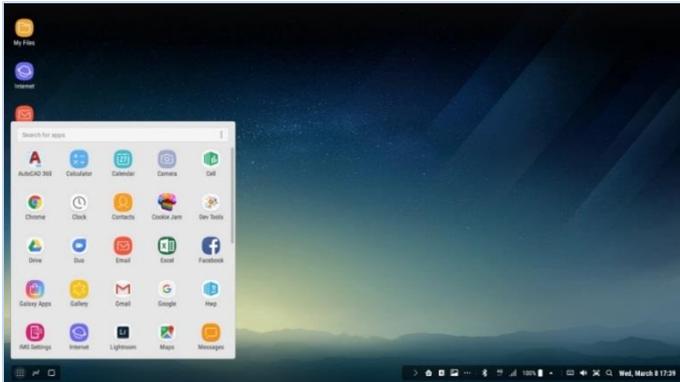

### Desktop-like Home Screen

Samsung DeX provides Home Screen familiar to Desktop users

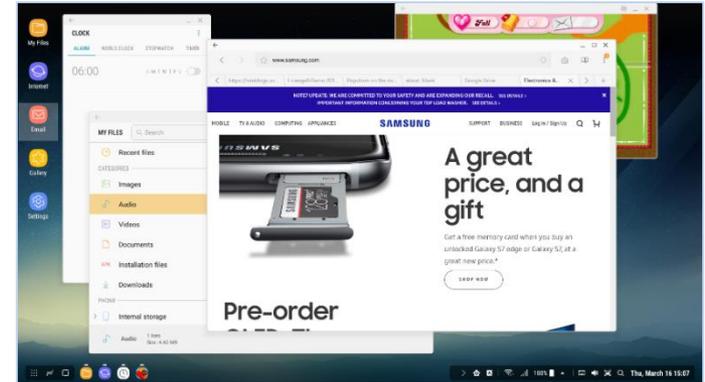


### Multiple Resizable Windows

User can not only launch multiple apps at the same time but also freely resize apps



### Keyboard/Mouse optimized experience

Mouse right click (contextual menu) and keyboard shortcuts are supported

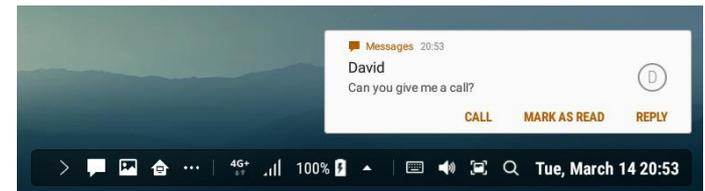


### Notification

User gets Pop-up notification from the right-bottom of the screen

# New S/W Features for G950F/G955F

## PAI – Play Auto Install (1/3)

- Google's app download solution (Play Store apk) that allows users to recover (re-install) the deleted applications or install new applications
- In Dream/Dream2 projects, PAI will be used to recover the removable Samsung and Google preloaded apps.

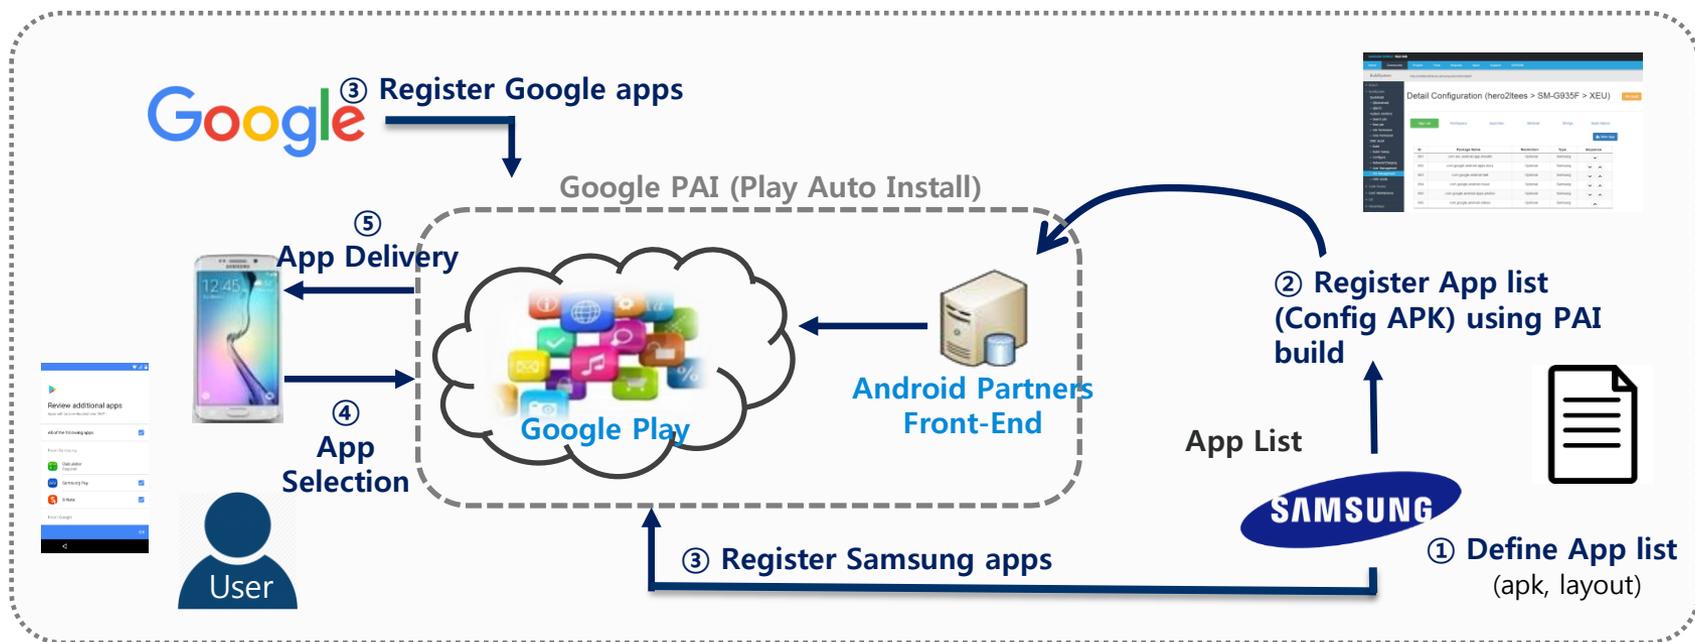


# New S/W Features for G950F/G955F


## PAI – Play Auto Install (2/3)

- Removable Preload App List


### Factory Reset

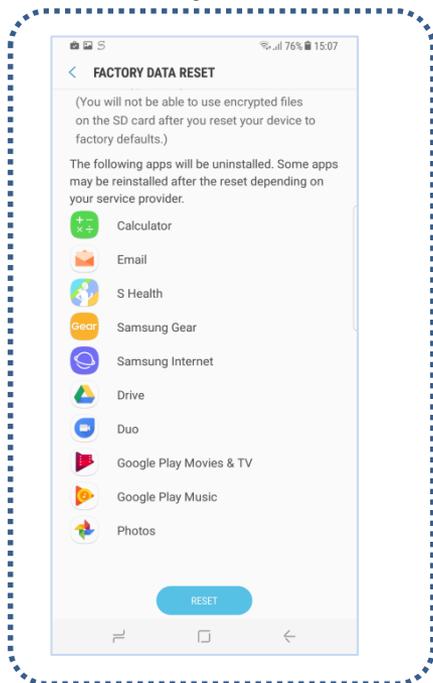

### Setup Wizard

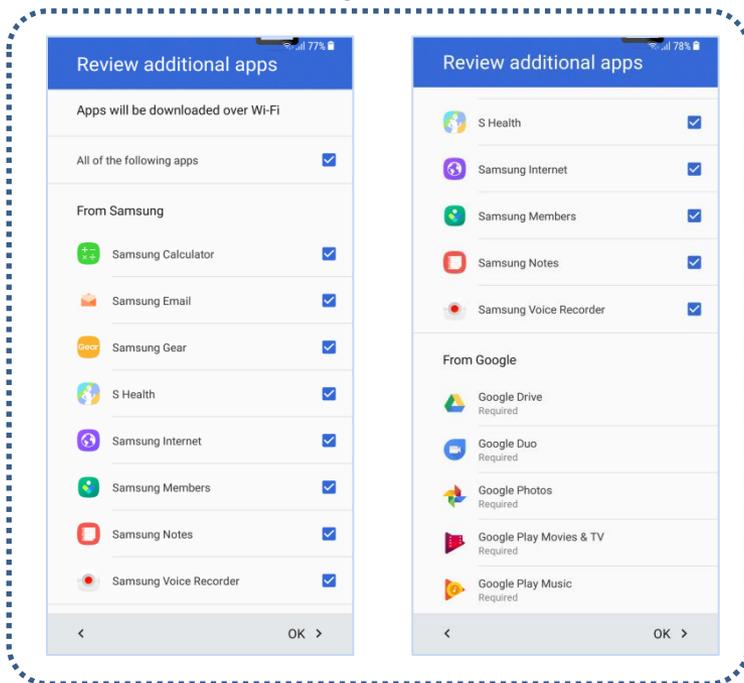

### Idle

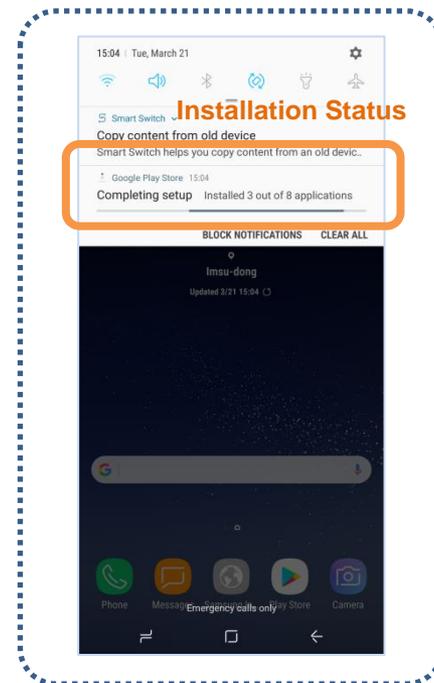

Samsung (9) : Internet, S Health, Samsung Pay\*, Samsung Note, Calculator, Voice Recorder, Email, Samsung Members\*, Samsung Gear


Google (5) : Play music, Duo, Photos, Play movies & TV, Drive

\* Samsung Pay, Samsung Members are not preloaded in all the countries. So in Global S/W they will be deleted while booting if they should not be preloaded for a specific country.


# New S/W Features for G950F/G955F

## PAI – Play Auto Install (3/3)

- App downloading Conditions

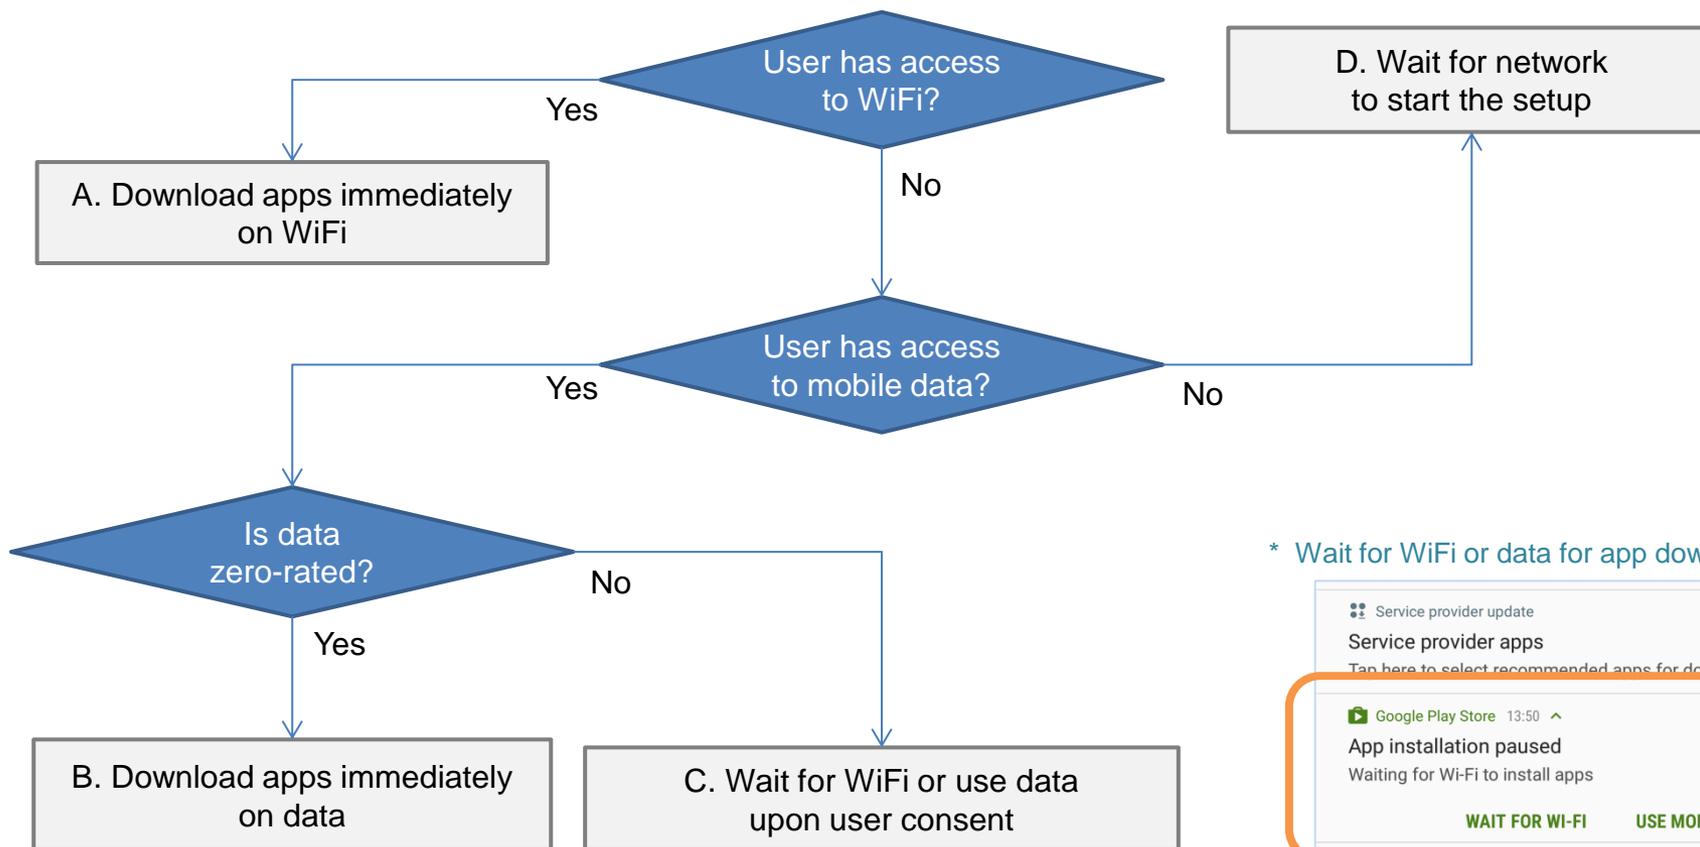

\* Wait for WiFi or data for app downloading

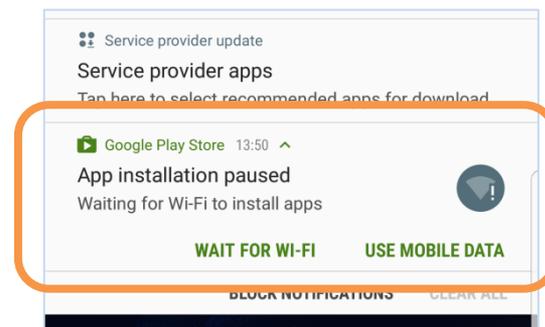


# New S/W Features for G950F/G955F


## OMC v4 (1/3)

- Open Market Customization: is “a tool for Single SW”

### Multi-Customers support

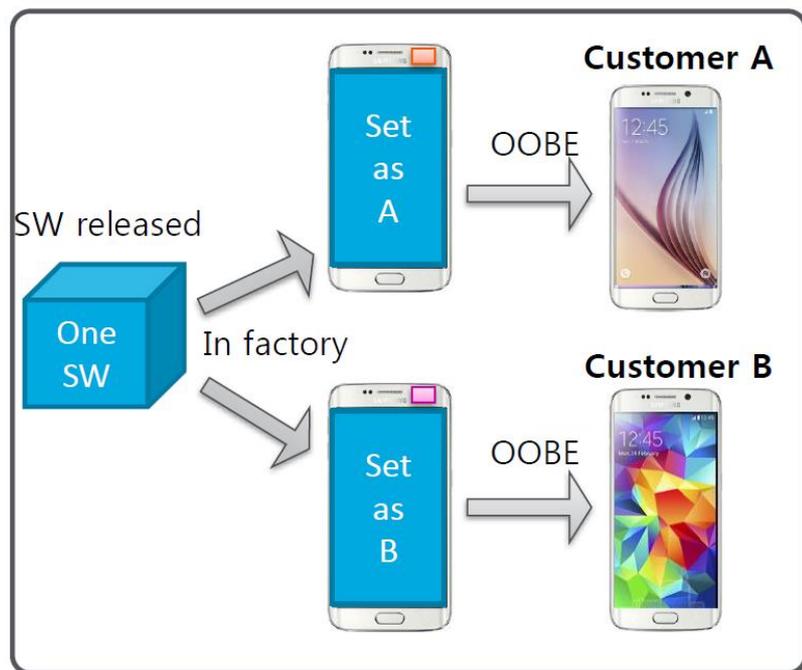

### SIM Swap

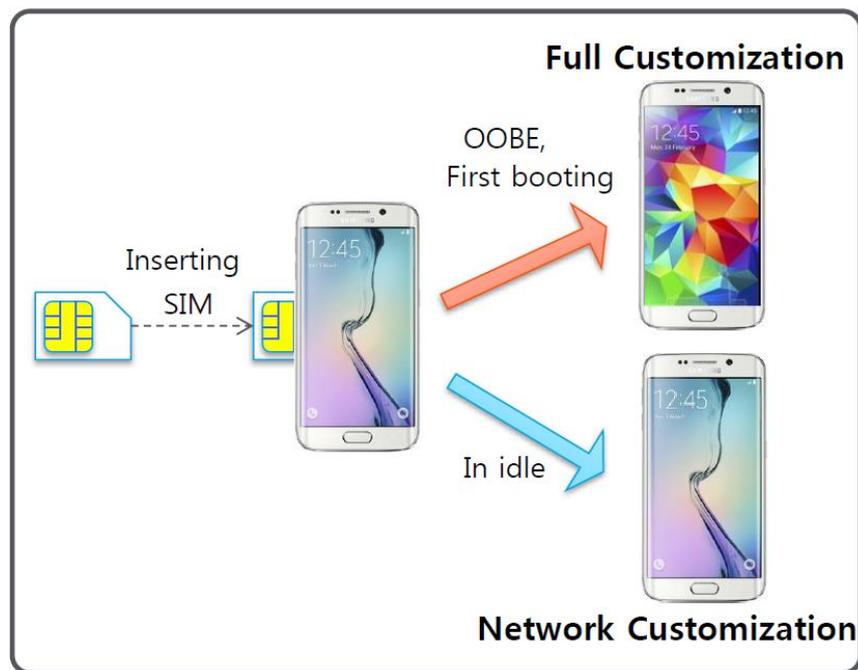


# New S/W Features for G950F/G955F

## OMC v4 (2/3)

- Scenario: OOB/Initial Booting time

1. Preloaded configurations are loaded and applied at first (OMC Preload)
2. Update Configuration via Samsung Server by step #3, #7 (OMC Update)
3. Download apps & resources from Galaxy Apps

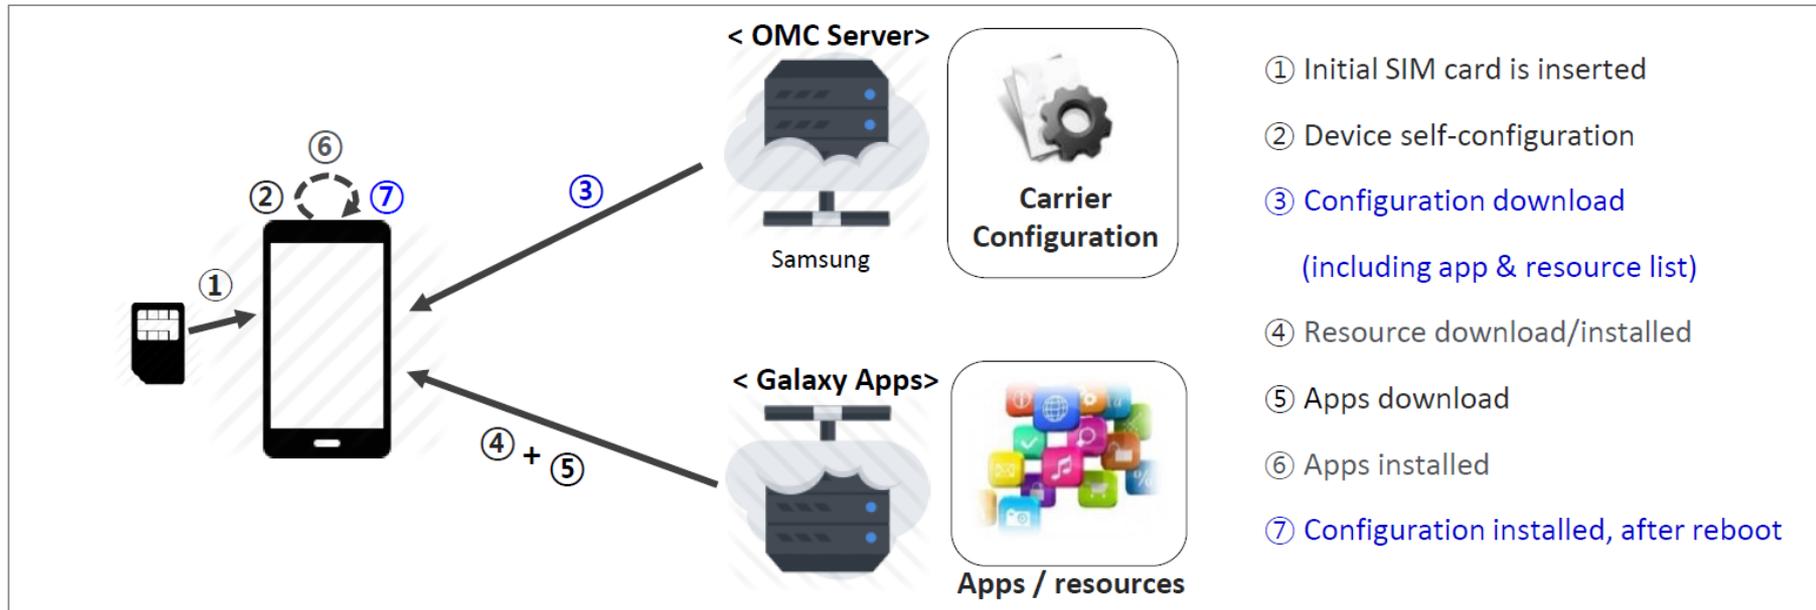


# New S/W Features for G950F/G955F


## OMC v4 (3/3)

- UX for App D/L and SIM Swap

### App D/L During SUW

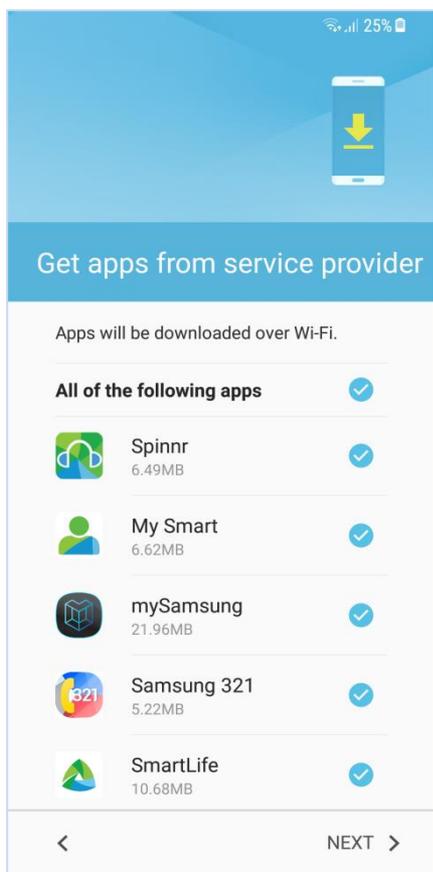


### SIM Swap During SUW

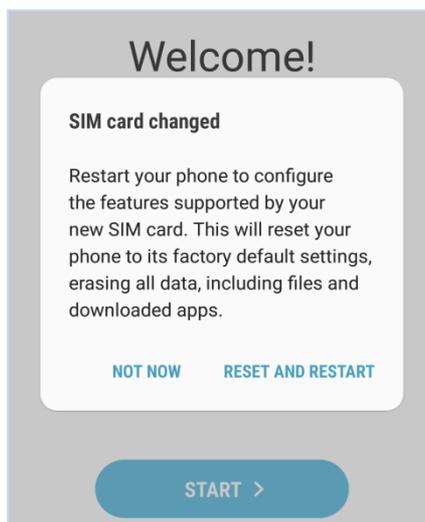

\* **RESET AND RESTART**  
- Full Customization

### SIM Swap After SUW

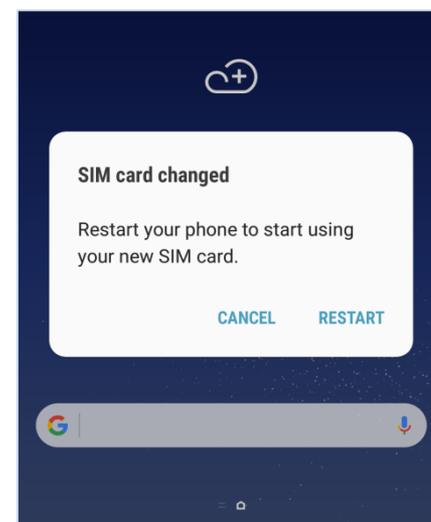

\* **RESTART**  
- Network Customization

# New Concepts(UI/IX) for G950F/G955F

## Home Screen & App tray

- Clean Home & App tray 1 page policy


※ Resolution: 2960x1440(QHD+)

S7




- 1 Briefing Home Screen 2 page
- 2 Enter App tray

S8

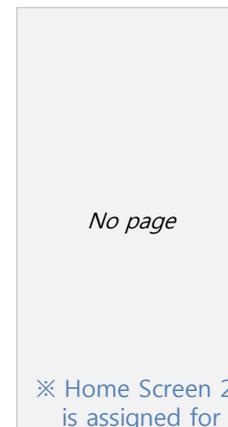

※ Home Screen 2page is assigned for a carrier

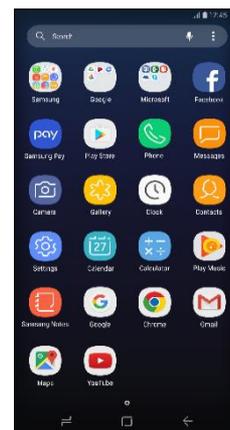

- 3 Hello Bixby Home
- 4 Enter App tray

# SVC Technical Information

## Basic Information

AP Chipset	CP Chipset	IF Cable	RF Cable		RF Divider
Samsung Exynos 8895		<b>GH81-11962W (USB C type)</b>	GH81-11962M (2ea) GH81-11962U (2ea)		GH81-11962A
Charger Spec			Charging Current Standard	New Pocket Type	Water Resistance
Adaptive (5.0 V-2A, 9.0V-1.67A)			-	-	IP68

## SVC Jig List for Galaxy S8

Item	Code	Item	Code
Hot Plate	GH81-12712E	OCTA Disass'y Jig Upper	GH81-12833A
OCTA Disass'y Holder	GH81-12119A	Double Sided Tape	GH81-12126A
Glass Absorber	GH81-11902D	Pressing JIG Body	GH81-11903A
TSP tape Attaching JIG	GH81-11905A	Pressing Pad(for Back Glass)	<a href="#">GH81-14725A</a>
		Pressing Pad(for Battery)	GH81-12694A



Copyright © 2017 Samsung Electronics

This guide is protected under international copyright laws.

No part of this guide may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics.