

5. MAIN Electrical Parts List

SEC Code	Design LOC	Description
0201-002973	Adhesive TIM	Adhesive TIM
0403-002038	ZD7006,ZD7007	DIODE-ZENER
0404-001250	D7001,D7002,D7004	DIODE-SCHOTTKY
0404-001250	D7005	DIODE-SCHOTTKY
0406-001506	ZD1000,ZD1001,ZD4006	DIODE-TVS
0406-001506	ZD4007,ZD4008,ZD4009	DIODE-TVS
0406-001506	ZD4010,ZD8007	DIODE-TVS
0406-001592	ZD9001,ZD9002,ZD9003	DIODE-TVS
0406-001592	ZD9004,ZD9005,ZD9006	DIODE-TVS
0406-001592	ZD9007,ZD9008,ZD9009	DIODE-TVS
0406-001606	ZD8015	DIODE-TVS
0406-001668	ZD9000	DIODE-TVS
0406-001675	D7003	DIODE-TVS
0406-001679	ZD4003,ZD4004,ZD4005	DIODE-TVS
0406-001690	ZD8008,ZD8009	DIODE-TVS
0406-001709	ZD8005,ZD8012,ZD8013	DIODE-TVS
0406-001709	ZD8014	DIODE-TVS
0406-001713	ZD5000,ZD5007,ZD5008	DIODE-TVS
0406-001713	ZD5009,ZD5010,ZD5011	DIODE-TVS
0406-001715	ZD5001,ZD5002,ZD5003	DIODE-TVS
0406-001715	ZD5004,ZD5005,ZD5006	DIODE-TVS
0406-001715	ZD5013,ZD5014,ZD5015	DIODE-TVS
0406-001715	ZD5016	DIODE-TVS
0406-001717	ZD7000	DIODE-TVS
0406-001725	ZD4011,ZD4012	DIODE-TVS
0406-001729	ZD7001,ZD7002	DIODE-TVS
0505-002088	TR7000	FET-SILICON
0505-003564	TR9000	FET-SILICON
0505-003618	TR7001	FET-SILICON
0601-003552	LED7000	LED
0801-003602	U7016	IC
1001-001911	U1007	IC
1003-002769	U7014	IC
1003-002802	U3002	IC
1009-001066	U6000	IC
1105-002752	UCP601UP	IC
1107-002452	UME3000	IC

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

1201-003729	U4000	IC
1201-003817	U1013	IC
1201-003972	U1015	IC
1201-003974	U1009	IC
1201-003978	U1010	IC
1201-004019	PAM1002	IC
1201-004020	PAM1001	IC
1201-004025	PAM1000	IC
1201-004027	U8008	IC
1201-004029	U1014,U2012	IC
1201-004030	U2001,U2002	IC
1202-001120	U9008	IC
1203-008472	U7001	IC
1203-008487	U7009	IC
1203-008603	U4013	IC
1203-008690	U7012	IC
1203-008697	U7011	IC
1203-008699	U7000	IC
1203-008704	U9010	IC
1203-008709	U7008	IC
1203-008729	U7004	IC
1204-003686	U9005	IC
1204-003694	U1006	IC
1205-005496	U4004	IC
1205-005499	U8010	IC
1205-005518	U4012	IC
1205-005520	U3003	IC
1205-005533	UCP601	IC
1209-002294	U4007	IC
1209-002330	U4011	IC
1209-002344	U4006	IC
1209-002405	U4010	IC
1404-001724	TH5000,TH5001,TH7000	THERMISTOR
1404-001734	TH3000	THERMISTOR
1405-001183	V8000,V8001	VARISTOR
1405-001395	V2004,V4001,V4003	VARISTOR
1405-001395	V7004,V9000,V9001	VARISTOR
1405-001395	V9004	VARISTOR

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

1405-001404	V2000,V7000,V7001	VARISTOR
1405-001404	V7003,V9006	VARISTOR
1405-001403	V5000	VARISTOR
1405-001420	V2001	VARISTOR
2007-000156	R5041	R-CHIP
2007-000170	R3001	R-CHIP
2007-001341	R7000	R-CHIP
2007-007310	R5046,R5082	R-CHIP
2007-007315	R4013	R-CHIP
2007-007741	R3004,R7027,R7030	R-CHIP
2007-007741	R7031,R7032,R7040	R-CHIP
2007-007946	R3003	R-CHIP
2007-008043	R3002	R-CHIP
2007-008045	R7035,R7042,R7045	R-CHIP
2007-008045	R9002	R-CHIP
2007-008052	R9004	R-CHIP
2007-008055	R7028,R7046,R7047	R-CHIP
2007-008055	R7053	R-CHIP
2007-008057	R8000	R-CHIP
2007-008210	R1005	R-CHIP
2007-008211	R4016	R-CHIP
2007-008403	R7029	R-CHIP
2007-008419	R5047,R5048,R5060	R-CHIP
2007-008419	R5061	R-CHIP
2007-008420	R7050,R8021	R-CHIP
2007-008483	R5076,R5077,R5078	R-CHIP
2007-008483	R5079	R-CHIP
2007-008486	R7001,R7005,R7007	R-CHIP
2007-008486	R7008,R7016,R7021	R-CHIP
2007-008486	R7025,R8014	R-CHIP
2007-008516	R4000,R4001,R4004	R-CHIP
2007-008516	R4005,R4010,R4014	R-CHIP
2007-008516	R5000,R5006,R5007	R-CHIP
2007-008516	R5008,R5009,R5016	R-CHIP
2007-008516	R5018,R5019,R5020	R-CHIP
2007-008516	R5021,R5022,R5023	R-CHIP
2007-008516	R5024,R5025,R5027	R-CHIP
2007-008516	R5072,R5080,R7003	R-CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2007-008516	R7015,R7017,R7020	R-CHIP
2007-008516	R8003,R8024,R9003	R-CHIP
2007-008531	R4026,R5030	R-CHIP
2007-008582	R1006,R1007	R-CHIP
2007-008588	R4002,R4003,R4012	R-CHIP
2007-008588	R8013,R8015,R8016	R-CHIP
2007-008588	R8017	R-CHIP
2007-008774	R8019,R8020	R-CHIP
2007-008798	R7004	R-CHIP
2007-008806	L4014,R1004	R-CHIP
2007-009111	R4011	R-CHIP
2007-009157	R4015,R5032,R5033	R-CHIP
2007-009157	R5034,R5036,R5037	R-CHIP
2007-009157	R5039,R5057,R5089	R-CHIP
2007-009157	R7002,R7019,R7026	R-CHIP
2007-009157	R8012	R-CHIP
2007-009171	R3005,R7052,R8018	R-CHIP
2007-009212	R5062,R5063,R8001	R-CHIP
2007-009212	R8007	R-CHIP
2007-009314	R5075	R-CHIP
2007-009361	R1000,R1003	R-CHIP
2007-009408	R5049,R5050,R5051	R-CHIP
2007-009408	R5052,R5053,R5054	R-CHIP
2007-009408	R5055,R5056,R5058	R-CHIP
2007-009408	R5059,R5064,R5065	R-CHIP
2007-009408	R5066,R5067,R5068	R-CHIP
2007-009408	R5069,R5084,R5085	R-CHIP
2007-009408	R5086,R5087	R-CHIP
2007-009866	R9000,R9001	R-CHIP
2007-009920	R5040,R5042,R5044	R-CHIP
2007-009920	R5045,R5070,R5071	R-CHIP
2007-009924	R8022,R8023	R-CHIP
2007-009954	R7009	R-CHIP
2007-009969	R8002	R-CHIP
2007-010029	R7039	R-CHIP
2007-011043	R5043	R-CHIP
2007-011648	R8026	R-CHIP
2007-012033	R1008,R1009	R-CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2007-012038	R7022	R-CHIP
2203-000489	C7120	C-CERAMIC,CHIP
2203-000679	C4059	C-CERAMIC,CHIP
2203-000725	C7146	C-CERAMIC,CHIP
2203-000812	C4053,C4064	C-CERAMIC,CHIP
2203-000854	C4058	C-CERAMIC,CHIP
2203-000995	C7168	C-CERAMIC,CHIP
2203-001239	C4055,C4060	C-CERAMIC,CHIP
2203-005682	C4001,C4002,C7128	C-CERAMIC,CHIP
2203-005682	C7134,C7155,C7165	C-CERAMIC,CHIP
2203-005682	C9011,C9016,C9017	C-CERAMIC,CHIP
2203-005682	C9018	C-CERAMIC,CHIP
2203-005717	C7044	C-CERAMIC,CHIP
2203-005719	C4065	C-CERAMIC,CHIP
2203-005725	C1043,C1046,C1083	C-CERAMIC,CHIP
2203-005725	C2029,C2032,C5024	C-CERAMIC,CHIP
2203-005725	C7020,C7039,C9010	C-CERAMIC,CHIP
2203-005726	C8036,C8037,C8043	C-CERAMIC,CHIP
2203-005731	C7050,C8042,C8047	C-CERAMIC,CHIP
2203-005732	C8022,C8044	C-CERAMIC,CHIP
2203-005732	C8045,R8025	C-CERAMIC,CHIP
2203-005736	C1000,C1004,C1006	C-CERAMIC,CHIP
2203-005736	C1007,C1009,C1012	C-CERAMIC,CHIP
2203-005736	C1015,C1016,C1018	C-CERAMIC,CHIP
2203-005736	C1019,C1021,C1035	C-CERAMIC,CHIP
2203-005736	C1036,C1039,C1044	C-CERAMIC,CHIP
2203-005736	C1045,C1054,C1071	C-CERAMIC,CHIP
2203-005736	C1076,C1081,C1084	C-CERAMIC,CHIP
2203-005736	C1085,C1095,C1099	C-CERAMIC,CHIP
2203-005736	C1102,C2006,C2008	C-CERAMIC,CHIP
2203-005736	C2009,C2018,C2036	C-CERAMIC,CHIP
2203-005736	C4012,C4014,C4016	C-CERAMIC,CHIP
2203-005736	C4023,C4024,C4025	C-CERAMIC,CHIP
2203-005736	C4027,C4063,C4070	C-CERAMIC,CHIP
2203-005736	C7142,C7156,C7166	C-CERAMIC,CHIP
2203-005777	C1005,C1017,C1031	C-CERAMIC,CHIP
2203-005777	C1042,C1082,C1089	C-CERAMIC,CHIP
2203-005777	C1090,C2011	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-005779	C9015	C-CERAMIC,CHIP
2203-005789	C1013,C1020,C1027	C-CERAMIC,CHIP
2203-005789	C1029,C1051,C1093	C-CERAMIC,CHIP
2203-005789	C2039	C-CERAMIC,CHIP
2203-005792	C1003,C1052,C1073	C-CERAMIC,CHIP
2203-005792	C4018	C-CERAMIC,CHIP
2203-006048	C4039	C-CERAMIC,CHIP
2203-006121	C8018	C-CERAMIC,CHIP
2203-006123	C2017	C-CERAMIC,CHIP
2203-006187	C1001,C1024	C-CERAMIC,CHIP
2203-006194	C1086,C1087,C1094	C-CERAMIC,CHIP
2203-006194	C1096,C1097,C2002	C-CERAMIC,CHIP
2203-006194	C3031,C4011,C4042	C-CERAMIC,CHIP
2203-006194	C4049,C5033,C8040	C-CERAMIC,CHIP
2203-006260	C1011	C-CERAMIC,CHIP
2203-006305	C2034	C-CERAMIC,CHIP
2203-006400	C1008,C1063,C2025	C-CERAMIC,CHIP
2203-006400	C2026,C3021,C4005	C-CERAMIC,CHIP
2203-006400	C4054,C5025,C5026	C-CERAMIC,CHIP
2203-006400	C5027,C7160,C8039	C-CERAMIC,CHIP
2203-006423	C1080,C2027,C2028	C-CERAMIC,CHIP
2203-006423	C3025,C4032,C4036	C-CERAMIC,CHIP
2203-006423	C4037,C4045,C4047	C-CERAMIC,CHIP
2203-006423	C5016,C6000,C6058	C-CERAMIC,CHIP
2203-006423	C7017,C7043,C7154	C-CERAMIC,CHIP
2203-006423	C7162,C8009,C8013	C-CERAMIC,CHIP
2203-006423	C8049,C8050,C9003	C-CERAMIC,CHIP
2203-006426	C1077,C1078	C-CERAMIC,CHIP
2203-006556	C4007	C-CERAMIC,CHIP
2203-006562	C1070,C3007,C7110	C-CERAMIC,CHIP
2203-006562	C7148,C7150,C7159	C-CERAMIC,CHIP
2203-006611	C1022	C-CERAMIC,CHIP
2203-006665	C1079	C-CERAMIC,CHIP
2203-006668	C3034,C3035,C5037	C-CERAMIC,CHIP
2203-006668	C5038,C5039,C9005	C-CERAMIC,CHIP
2203-006674	C1053	C-CERAMIC,CHIP
2203-006839	C1056,C1057,C1058	C-CERAMIC,CHIP
2203-006839	C1059,C1061,C1066	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-006839	C1068,C1074,C3017	C-CERAMIC,CHIP
2203-006839	C3018,C3027,C3032	C-CERAMIC,CHIP
2203-006839	C3033,C4030,C4031	C-CERAMIC,CHIP
2203-006839	C5028,C5029,C5031	C-CERAMIC,CHIP
2203-006839	C5032,C8024	C-CERAMIC,CHIP
2203-006841	C7104,C7141,C7149	C-CERAMIC,CHIP
2203-006846	C1026	C-CERAMIC,CHIP
2203-006872	C7031,C7143	C-CERAMIC,CHIP
2203-006979	C3006,C3008,C3012	C-CERAMIC,CHIP
2203-006979	C3014,C3016,C3036	C-CERAMIC,CHIP
2203-007194	L2031	C-CERAMIC,CHIP
2203-007210	C3024	C-CERAMIC,CHIP
2203-007269	C9022	C-CERAMIC,CHIP
2203-007270	C7099	C-CERAMIC,CHIP
2203-007271	C7002,C7008,C7157	C-CERAMIC,CHIP
2203-007271	C8048	C-CERAMIC,CHIP
2203-007279	C1060,C4046	C-CERAMIC,CHIP
2203-007342	C7145	C-CERAMIC,CHIP
2203-007369	C6001,C6002,C6003	C-CERAMIC,CHIP
2203-007369	C6004,C6005,C6006	C-CERAMIC,CHIP
2203-007369	C6008,C6013,C6014	C-CERAMIC,CHIP
2203-007369	C6015,C6016,C6017	C-CERAMIC,CHIP
2203-007369	C6018,C6040,C6041	C-CERAMIC,CHIP
2203-007369	C6042,C6043,C6049	C-CERAMIC,CHIP
2203-007369	C6050,C6051,C6052	C-CERAMIC,CHIP
2203-007369	C6053,C6054,C6057	C-CERAMIC,CHIP
2203-007369	C7102	C-CERAMIC,CHIP
2203-007391	C2024,C7035,C8023	C-CERAMIC,CHIP
2203-007392	C7079,C7101,C7113	C-CERAMIC,CHIP
2203-007393	C3023,C4022,C4034	C-CERAMIC,CHIP
2203-007393	C4038,C4041,C5030	C-CERAMIC,CHIP
2203-007393	C7019,C7034,C7089	C-CERAMIC,CHIP
2203-007393	C7171,C8016,C8017	C-CERAMIC,CHIP
2203-007393	C9024,C9025	C-CERAMIC,CHIP
2203-007449	C1030,C1048,C3004	C-CERAMIC,CHIP
2203-007449	C3005,C3009,C3010	C-CERAMIC,CHIP
2203-007449	C3028,C4004,C4006	C-CERAMIC,CHIP
2203-007449	C4008,C4009,C4010	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-007449	C4017,C4020,C4040	C-CERAMIC,CHIP
2203-007449	C4043,C4044,C4048	C-CERAMIC,CHIP
2203-007449	C4052,C5008,C5009	C-CERAMIC,CHIP
2203-007449	C5012,C5013,C5014	C-CERAMIC,CHIP
2203-007449	C5015,C5017,C5018	C-CERAMIC,CHIP
2203-007449	C5019,C5020,C5021	C-CERAMIC,CHIP
2203-007449	C5022,C5023,C6007	C-CERAMIC,CHIP
2203-007449	C6009,C6010,C6011	C-CERAMIC,CHIP
2203-007449	C6019,C6020,C6021	C-CERAMIC,CHIP
2203-007449	C6022,C6027,C6029	C-CERAMIC,CHIP
2203-007449	C6030,C6031,C6032	C-CERAMIC,CHIP
2203-007449	C6044,C6045,C6046	C-CERAMIC,CHIP
2203-007449	C6047,C7081,C7082	C-CERAMIC,CHIP
2203-007449	C7086,C7087,C7094	C-CERAMIC,CHIP
2203-007449	C7131,C7140,C7144	C-CERAMIC,CHIP
2203-007449	C8002,C8003,C8004	C-CERAMIC,CHIP
2203-007449	C8005,C8007,C8008	C-CERAMIC,CHIP
2203-007449	C8014,C8030,C8032	C-CERAMIC,CHIP
2203-007449	C8035,C9006,C9033	C-CERAMIC,CHIP
2203-007449	C9042	C-CERAMIC,CHIP
2203-007456	C7158	C-CERAMIC,CHIP
2203-007474	C3011,C3015,C4050	C-CERAMIC,CHIP
2203-007474	C7072,C9007,C9008	C-CERAMIC,CHIP
2203-007503	C7118,C7161	C-CERAMIC,CHIP
2203-007544	C7106,C7109,C7112	C-CERAMIC,CHIP
2203-007544	C7114	C-CERAMIC,CHIP
2203-007634	C7151	C-CERAMIC,CHIP
2203-007781	C9027	C-CERAMIC,CHIP
2203-007795	C7080,C9009	C-CERAMIC,CHIP
2203-007796	C4000,C4033,C4035	C-CERAMIC,CHIP
2203-007796	C8010	C-CERAMIC,CHIP
2203-007809	C8046	C-CERAMIC,CHIP
2203-008097	C7016,C7040,C7103	C-CERAMIC,CHIP
2203-008097	C7105,C7132,C7133	C-CERAMIC,CHIP
2203-008097	C8026,C8038	C-CERAMIC,CHIP
2203-008158	C7115,C7116,C7122	C-CERAMIC,CHIP
2203-008158	C7123	C-CERAMIC,CHIP
2203-008161	C7117,C7121	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-008242	C3003,C3019,C3026	C-CERAMIC,CHIP
2203-008242	C4019,C4066,C4067	C-CERAMIC,CHIP
2203-008242	C5007,C5010,C6028	C-CERAMIC,CHIP
2203-008242	C6033,C6034,C6035	C-CERAMIC,CHIP
2203-008242	C6036,C6037,C6038	C-CERAMIC,CHIP
2203-008242	C6039,C6055,C6056	C-CERAMIC,CHIP
2203-008242	C7000,C7001,C7012	C-CERAMIC,CHIP
2203-008242	C7024,C7025,C7026	C-CERAMIC,CHIP
2203-008242	C7027,C7028,C7029	C-CERAMIC,CHIP
2203-008242	C7030,C7032,C7033	C-CERAMIC,CHIP
2203-008242	C7066,C7067,C7068	C-CERAMIC,CHIP
2203-008242	C7069,C7071,C7083	C-CERAMIC,CHIP
2203-008242	C7084,C7085,C7088	C-CERAMIC,CHIP
2203-008242	C7090,C7091,C7092	C-CERAMIC,CHIP
2203-008242	C7095,C7096,C7097	C-CERAMIC,CHIP
2203-008242	C7098,C8015,C8019	C-CERAMIC,CHIP
2203-008242	C9000,C9001,C9004	C-CERAMIC,CHIP
2203-008242	C9012,C9013,C9014	C-CERAMIC,CHIP
2203-008242	C9021,C9028,C9029	C-CERAMIC,CHIP
2203-008242	C9036,C9038,C9039	C-CERAMIC,CHIP
2203-008242	C9041,C9043	C-CERAMIC,CHIP
2203-008527	C7009,C7065,C7076	C-CERAMIC,CHIP
2203-008527	C7129,C7130,C9019	C-CERAMIC,CHIP
2203-008527	C9026	C-CERAMIC,CHIP
2203-008529	C1010,C4021	C-CERAMIC,CHIP
2203-008572	C8027,C8028,C8029	C-CERAMIC,CHIP
2203-008692	C8011	C-CERAMIC,CHIP
2203-008844	C7003,C7004,C7007	C-CERAMIC,CHIP
2203-008844	C7013,C7015,C7018	C-CERAMIC,CHIP
2203-008844	C7021,C7036,C7037	C-CERAMIC,CHIP
2203-008844	C7042,C7047,C7049	C-CERAMIC,CHIP
2203-008844	C7052,C7053,C7056	C-CERAMIC,CHIP
2203-008844	C7059,C7061,C7063	C-CERAMIC,CHIP
2203-008860	C3020,C4051,C4068	C-CERAMIC,CHIP
2203-008860	C7135,C7136,C9032	C-CERAMIC,CHIP
2203-008860	C9034,C9035,C9037	C-CERAMIC,CHIP
2203-008860	C9040	C-CERAMIC,CHIP
2203-008876	C8000	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-008960	C7107,C7108,C7125	C-CERAMIC,CHIP
2203-009048	C8012,C9030,C9031	C-CERAMIC,CHIP
2203-009064	C5002,C5003,C5004	C-CERAMIC,CHIP
2203-009064	C5005,C5006	C-CERAMIC,CHIP
2203-009167	C4056,C4061,C7163	C-CERAMIC,CHIP
2203-009328	C7014,C7046,C7062	C-CERAMIC,CHIP
2203-009328	C9002	C-CERAMIC,CHIP
2203-009444	C1075,C7111	C-CERAMIC,CHIP
2203-009537	C3013,C6012,C6048	C-CERAMIC,CHIP
2203-009537	C7005,C7010,C7011	C-CERAMIC,CHIP
2203-009537	C7022,C7041,C7045	C-CERAMIC,CHIP
2203-009537	C7054,C7055,C7057	C-CERAMIC,CHIP
2203-009537	C7058,C7060,C7064	C-CERAMIC,CHIP
2203-009537	C7070,C7074,C7075	C-CERAMIC,CHIP
2203-009537	C9020	C-CERAMIC,CHIP
2203-009618	C1062,C7006,C7119	C-CERAMIC,CHIP
2203-009618	C9023	C-CERAMIC,CHIP
2203-009733	C7038,C7124,C7147	C-CERAMIC,CHIP
2203-009733	C8041	C-CERAMIC,CHIP
2203-009735	C3000,C5000,C5001	C-CERAMIC,CHIP
2203-009735	C5011,C5040	C-CERAMIC,CHIP
2203-009736	C7023,C7093,C8001	C-CERAMIC,CHIP
2203-009736	C8006,C8020,C8021	CAPACITOR
2203-009736	C8025,C8034	CAPACITOR
2409-001369	C7077,C7078,TA7000	CAPACITOR
2409-001369	TA7001,TA7003	CAPACITOR
2409-001387	TA7002,TA7005	CAPACITOR
2703-002901	L1010,L2015,L2020	INDUCTOR-SMD
2703-002907	C2021,L4002	INDUCTOR-SMD
2703-002958	L1016,L1032,L2008	INDUCTOR-SMD
2703-002959	L9002	INDUCTOR-SMD
2703-002960	L4018,L4019,L4020	INDUCTOR-SMD
2703-002961	L8007,L8008,L8009	INDUCTOR-SMD
2703-002961	L8010	INDUCTOR-SMD
2703-003970	L1034,L2024	INDUCTOR-SMD
2703-004000	L1021	INDUCTOR-SMD
2703-004012	L1045,L1054,L1068	INDUCTOR-SMD
2703-004012	L1072,L1077	INDUCTOR-SMD

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2703-004013	L1040,L2030	INDUCTOR-SMD
2703-004014	L2028	INDUCTOR-SMD
2703-004024	L1023,L1081,L1083	INDUCTOR-SMD
2703-004024	L1085	INDUCTOR-SMD
2703-004032	L1046,L2006,L2007	INDUCTOR-SMD
2703-004032	L2011,L4005	INDUCTOR-SMD
2703-004034	L1079,L2034	INDUCTOR-SMD
2703-004035	L1008,L1056,L1057	INDUCTOR-SMD
2703-004035	L1074,L1087,L2019	INDUCTOR-SMD
2703-004035	L2025,L2038	INDUCTOR-SMD
2703-004037	L1012,L1019,L1044	INDUCTOR-SMD
2703-004037	L1050,L1055,L1059	INDUCTOR-SMD
2703-004037	L1073,L1075,L1076	INDUCTOR-SMD
2703-004037	L2009,L2023,L2033	INDUCTOR-SMD
2703-004037	L2036	INDUCTOR-SMD
2703-004038	L1042,L2021,L2022	INDUCTOR-SMD
2703-004038	L2035,L4023	INDUCTOR-SMD
2703-004193	L4017	INDUCTOR-SMD
2703-004287	L1049	INDUCTOR-SMD
2703-004289	L1014,L1052,L1063	INDUCTOR-SMD
2703-004289	L1069	INDUCTOR-SMD
2703-004300	L1001,L1036,L1065	INDUCTOR-SMD
2703-004300	L1071,L1078	INDUCTOR-SMD
2703-004362	L1002,L1018	INDUCTOR-SMD
2703-004363	L1000,L1004	INDUCTOR-SMD
2703-004366	L1025,L1035,L2002	INDUCTOR-SMD
2703-004366	L2010,L2039,L4006	INDUCTOR-SMD
2703-004367	L1006,L1009,L1020	INDUCTOR-SMD
2703-004367	L1022,L1026,L1037	INDUCTOR-SMD
2703-004367	L1082,L2003,L2026	INDUCTOR-SMD
2703-004367	L2027	INDUCTOR-SMD
2703-004764	L1005,L1015,L1027	INDUCTOR-SMD
2703-004764	L2012,L4012,L4013	INDUCTOR-SMD
2703-004786	L4016	INDUCTOR-SMD
2703-004901	L7004,L7006,L7007	INDUCTOR-SMD
2703-004901	L7008,L7009,L7010	INDUCTOR-SMD
2703-004901	L7014,L7015,L7016	INDUCTOR-SMD
2703-004901	L7017,L7018,L9007	INDUCTOR-SMD

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2703-004911	L2037	INDUCTOR-SMD
2703-004947	L7000,L8000	INDUCTOR-SMD
2703-005058	L1003,L1039,L1086	INDUCTOR-SMD
2703-005058	L2014,L7023	INDUCTOR-SMD
2703-005067	L7001,L7002,L7011	INDUCTOR-SMD
2703-005067	L7012,L7013	INDUCTOR-SMD
2703-005088	L1051,L1080,L4008	INDUCTOR-SMD
2703-005100	L7024,L7025,L8001	INDUCTOR-SMD
2703-005100	L8002	INDUCTOR-SMD
2703-005104	L4021,L4022	INDUCTOR-SMD
2703-005201	L7021	INDUCTOR-SMD
2703-005225	L7026	INDUCTOR-SMD;IND
2703-005226	L7003,L7005	INDUCTOR-SMD;IND
2703-005418	L9008	INDUCTOR-SMD;IND
2703-005419	L9011	INDUCTOR-SMD;IND
2703-005428	L9012	INDUCTOR-SMD;IND
2703-005430	L1047,L1048	INDUCTOR-SMD;IND
2801-005393	OSC7000	CRYSTAL-UNIT
2805-001118	OSC4000	OSCILLATOR
2809-001421	TCX3000	OSCILLATOR-VCTCXO
2901-001690	C3001,C3002,C6023	FILTER-EMI
2901-001690	C6024,C6025,C6026	FILTER-EMI
2904-002137	F2001	FILTER-SAW
2904-002143	F1007,F1010	FILTER-SAW
2904-002150	F2000	FILTER-SAW
2904-002161	F1009	FILTER-SAW
2904-002168	F4000	FILTER-SAW
2904-002198	F1008,F2004	FILTER-SAW
2904-002210	F1002	FILTER-SAW
2904-002211	F2003	FILTER-SAW
2904-002253	F1006	FILTER-SAW
2904-002256	F1000	FILTER-SAW
2904-002298	F2005	FILTER-SAW
2904-002323	F4002	FILTER-SAW
2904-002346	F2002	FILTER-SAW
2910-000363	F1004	FILTER
2910-000364	F1001	FILTER
2911-000403	U2008	FILTER

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2911-000406	U2006	FILTER
2911-000420	U2007	FILTER
3003-001210	MIC8009	MIC-CONDENSOR
3301-001885	L8006	CORE-FERRITE BEAD
3301-001895	L1060,L1061,L2016	CORE-FERRITE BEAD
3301-001895	L2017,L2018,L3003	CORE-FERRITE BEAD
3301-001895	L3005,L4000,L4001	CORE-FERRITE BEAD
3301-001895	L4003	CORE-FERRITE BEAD
3301-001971	L1043,L6000	CORE-FERRITE BEAD
3301-002078	L9000	CORE-FERRITE BEAD
3301-002228	L8003	CORE-FERRITE BEAD
3301-002236	L9003,L9004,L9005	CORE-FERRITE BEAD
3301-002237	L9001	CORE-FERRITE BEAD
3301-002238	L4025	CORE-FERRITE BEAD
3301-002279	L8004,L8005	CORE-FERRITE BEAD
3301-002312	L1030,L1031,L3000	CORE-FERRITE BEAD
3301-002312	L3001,L3002,L3004	CORE-FERRITE BEAD
3301-002312	L4024,L9006,L9009	CORE-FERRITE BEAD
3301-002312	L9010	CORE-FERRITE BEAD
3301-002331	L7019,L7020,L7022	CORE-FERRITE BEAD
3705-001937	RFS1000,RFS1001	CONNECTOR-COAXIAL
3709-001892	SIM5000	CONNECTOR-CARD EDGE
3711-008716	HDC9001	CONNECTOR-HEADER
3711-008741	HDC4001	CONNECTOR-HEADER
3711-008800	HDC7001,HDC8001	CONNECTOR-HEADER
3711-008824	HDC7002	CONNECTOR-HEADER
3711-008847	HDC7000	CONNECTOR-HEADER
3711-008999	HDC8000	CONNECTOR-HEADER
3711-009058	HDC4000	CONNECTOR-HEADER
3711-009065	HDC9000	CONNECTOR-HEADER
3711-009066	HDC9002	CONNECTOR-HEADER
3712-001604	ANT2000,ANT2002	CONNECTOR
3712-001604	ANT2003,ANT2004	CONNECTOR
3712-001604	ANT2005,ANT4000	CONNECTOR
3712-001604	ANT4001,ANT4002	CONNECTOR
3712-001604	ANT4003,ANT4004	CONNECTOR
3712-001604	ANT4005,ANT7000	CONNECTOR
3712-001604	ANT7001,ANT7002	CONNECTOR

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

3712-001604	ANT7003,ANT7006	CONNECTOR
3712-001604	ANT7007,CN4000	CONNECTOR
3712-001604	CN9000,CN9001,CN9003	CONNECTOR
3712-001621	ANT8000,ANT8001	CONNECTOR
3712-001626	ANT7004,ANT7005	CONNECTOR
4709-002196	F1003	RF-MODULE
4709-002226	CPL2000	RF-MODULE
4709-002445	U4005	RF-MODULE
GH02-12257A	SC6002SP	Tape
GH61-10712A	SUS9000,SUS9002	SUS
GH61-10714A	SUS9001	SUS
GH62-00040A	GA9005	GASKET
GH62-00043A	GA9004	GASKET
GH63-12197A	SC6002	SHIELD CAN- AP
GH63-12198A	SC6001	SHIELD CAN- MEM
GH63-12221A	SC6000	SHIELD CAN- ET
GH80-03321A	R6000	0 OHM
GH98-38897A	SC6003	SHIELD CAN- PAMID
GH98-38898A	SC6004	SHIELD CAN- PMIC
GH98-38899A	SC6005	SHIELD CAN- SUBPMIC
GH98-38900A	SC6006	SHIELD CAN- RF

Please consult the GSPN website (Samsung Portal) for the most recent version of the product's part list.